


REMOVAL AND INSTALLATION (Continued)

2. Fold edges of the vinyl toward center and hold so that edges clear end cap slots.

NOTE: Masking tape or a rubber band can be used to secure the vinyl to the LH side of the roller tube.

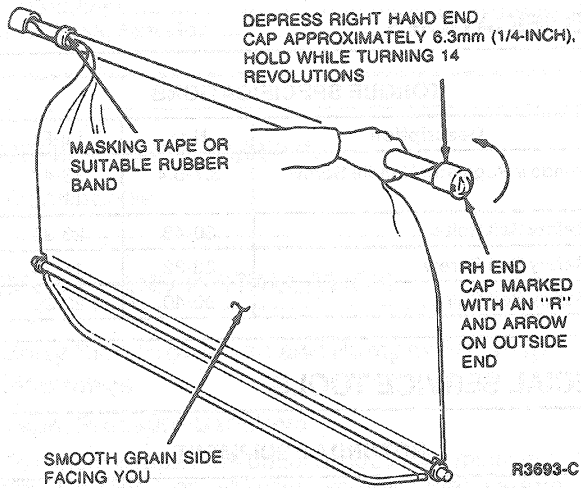


3. While holding vinyl and roller tube, depress RH end cap (marked with an "R" on outside end) approximately 6.35mm (1/4 inch) to disengage clutch. Turn 14 revolutions in direction shown. For reference, wind direction is also marked on the outside end of end cap.
4. Release RH end cap. This should engage clutch and prevent loss of spring tension. Unfold vinyl and replace it in end cap slots.
5. With vinyl fully retracted, insert luggage cover retainer. Note that RH retainer bracket opening is narrower than LH.
6. Check for proper operation of luggage cover.


End Cap Replacement, Roll-Up Type

NOTE: Prior to replacing the end cap on a roll-up type luggage cover assembly, the cover fabric must be fully retracted. This may require an assistant.

1. Position cover assembly on end.

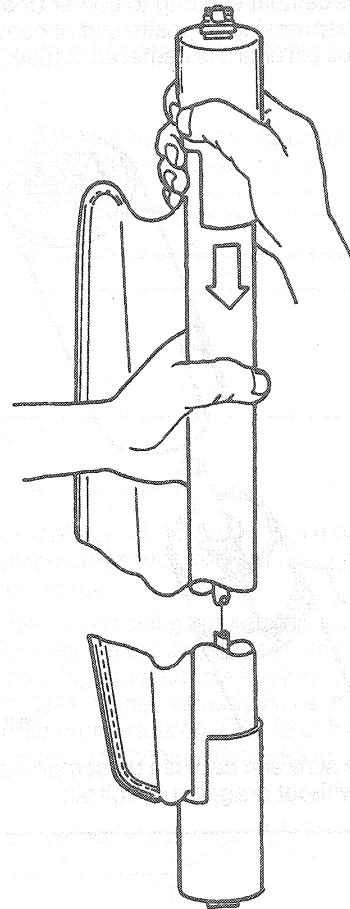

2. Depress end cap until roll pin, used to retain end cap to center (metal tube), is exposed. (Maintain pressure through Step 3.)
3. Using a 3/32-inch punch, drive out roll pin and remove end cap.

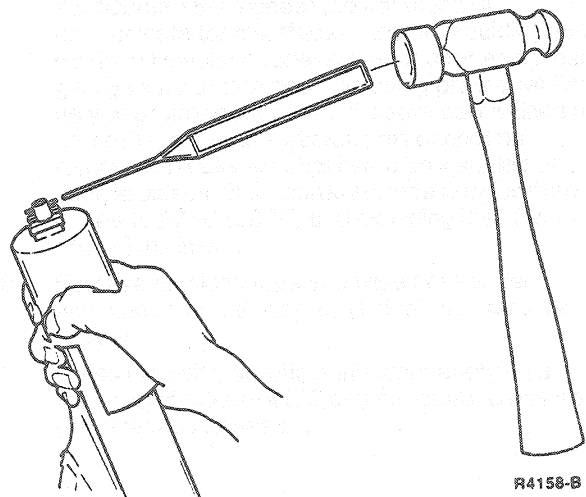

NOTE: Prior to installing replacement cap, make sure there are no burrs on center (metal) tube.