


DIAGNOSIS (Continued)

Switch Logic Table

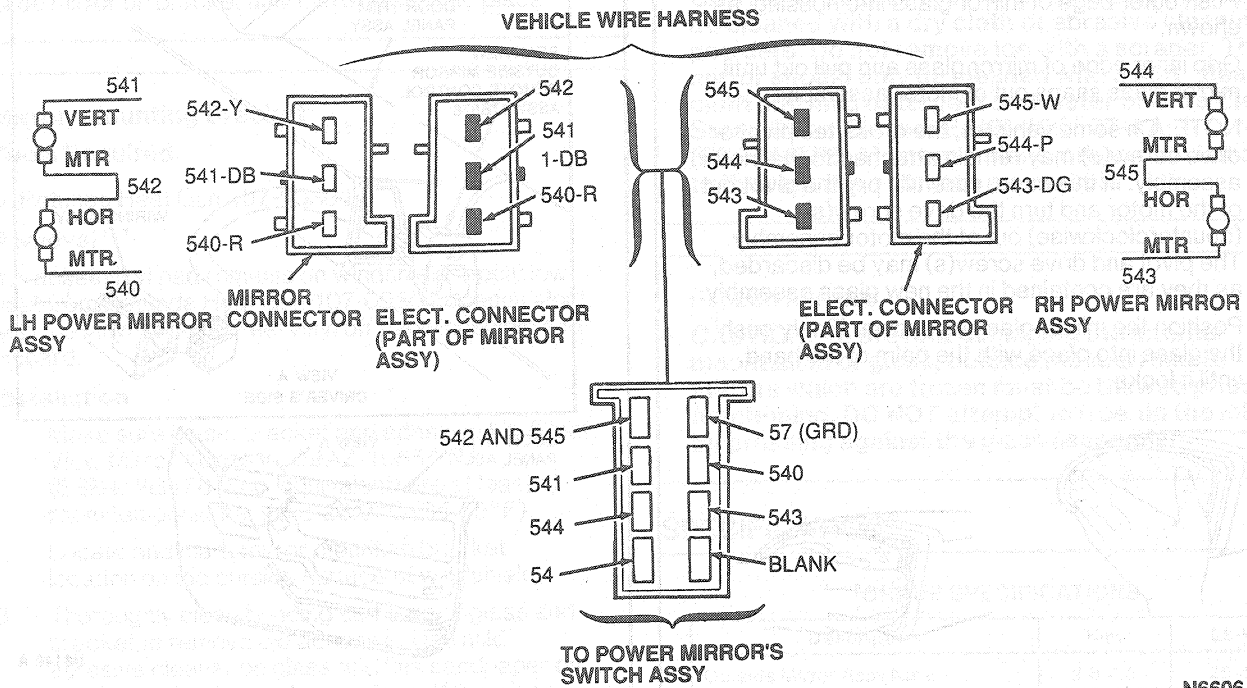

N6606-E

MIRROR OPERATIONAL MODE	DIRECTIONAL MOVEMENT	LH MIRROR		RH MIRROR	
		POS. VOLTAGE (+)	GRD. (-)	POS. VOLTAGE (+)	GRD. (-)
VERTICAL	UP	541	542	544	545
VERTICAL	DOWN	545, 540	541	542, 543	544
HORIZONTAL	LEFT	540	542	543	545
HORIZONTAL	RIGHT	545, 541	540	542, 544	543

REMOVAL AND INSTALLATION

Mirror Assembly, Outside Rear View

Power

RH and LH Door

Removal

Refer to illustration under Description.

1. Disconnect battery ground cable.
2. Remove one screw retaining mirror mounting hole cover and remove cover.
3. Remove door trim panel. Refer to Section 01-05.
4. Disconnect mirror assembly wiring connector. Remove necessary wiring guides.
5. Remove three mirror retaining nuts. Remove mirror while guiding wiring and connector through hole in door.

Installation

1. Install mirror assembly by routing connector and wiring through hole in door. Attach with three retaining nuts. Tighten retaining nuts to 2.8-4.5 N-m (25-40 lb-in).
2. Connect mirror wiring connector and install wiring guides.
3. Replace mirror mounting hole cover and install one screw.
4. Replace door trim panel. Refer to Section 01-05.
5. Connect battery ground cable.
6. Snap on new trim (Part No. 17D742-3—Top Finish Panel) if new mirror assembly has been installed.