



REMOVAL AND INSTALLATION (Continued)

Mirror Glass, Power—Replacement



1. Push outer edge of mirror glass into housing, as shown.
2. Grip inner edge of mirror glass and pull out until mirror glass snaps out of motor assembly.

NOTE: On some vehicles, the cross-tee pivot or drive screw(s) may remain attached to the motor assembly. In this case, carefully pry the pivot out of the motor and turn the drive screw(s) (counterclockwise) out of the motor assembly. The pivot and drive screw(s) may be discarded, as they are contained in the new glass assembly.

3. Position the mirror glass as shown. Firmly push the glass into place with the palm of the hand, until it locks.

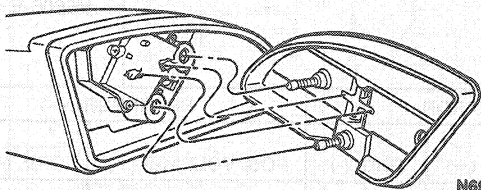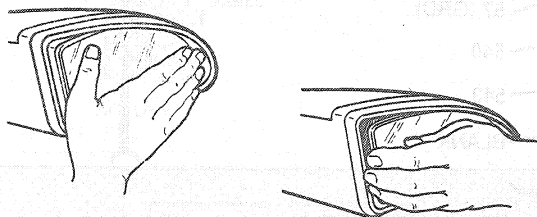

N6952-B

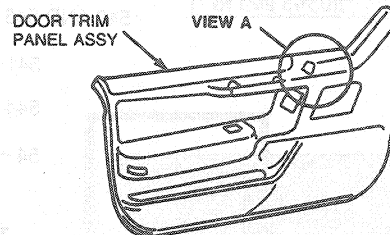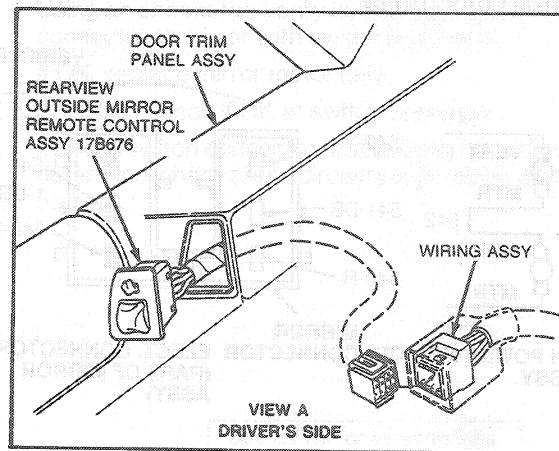

N8149-A

Mirror, Inside Rear View


Mirror Mount, Screwless

Tools Required:

- Inside Mirror Removal Tool T91T-17700-A

Removal

1. Grasp mirror firmly.
2. Insert a screwdriver into slot until spring is contacted.
3. Using Inside Mirror Removal Tool T91T-17700-A, remove mirror assembly by sliding upward and away from mounting bracket.

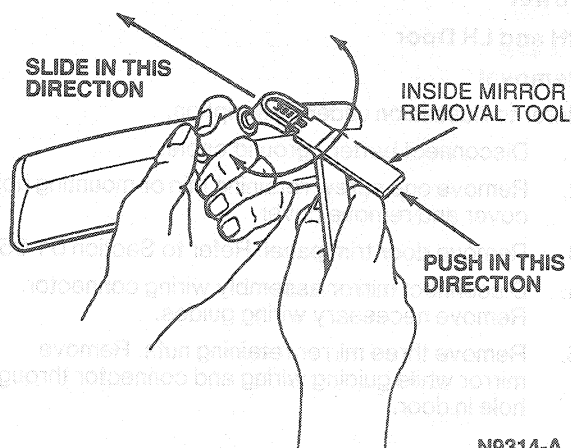

N9314-A

Mirror Switch, Power

Removal and Installation

1. Remove driver's door trim panel.
2. Depress the retaining clips on switch housing and push base of switch out of trim panel.
3. Disconnect wiring connector and remove switch.
4. To install new switch, reverse Removal procedure.