

DESCRIPTION AND OPERATION (Continued)

Head Restraints

Each front seat is equipped with a dual post design, 2-way or 4-way head restraint. The 4-way head restraint is capable of a 60 degree rotation from normal position by grasping head restraint and pulling forward on top surface. The guide sleeves are retained in the seat back by self-contained, integrally moulded ribs and contain a removable spring that permits the positioning of the head restraint.

Recliner, Manual

With the seat back recliner system, the seat back is reclined rearward for optimum occupant comfort. The reclining seat back is adjusted by a release handle on the outboard side of the seat cushion. To recline the seat back, pull and lift the handle upward, push the seat back to the desired position and release the handle. Spring action will return the seat back to its full-up position when the handle is lifted and occupant back pressure is removed.

If the recliner assembly is removed for any reason, it must be reinstalled as outlined. Tighten all retaining screws as outlined.


If a recliner assembly or component is non-functional or damaged, the entire recliner assembly must be replaced. The recliner assembly is a modular design and the individual components cannot be serviced or replaced independently.

Wagon Second Seats

The seat backs on the second seat are split (60/40) and operate independently of each other. To fold a seat back to the cargo position, push down on the button located on the top outboard corner of the seat back and rotate seat back forward until seat back locks in the cargo floor position. To return seat back to the upright (seating) position, push down on the seat back and hold in this position while pressing the release button, followed by raising the seat back to the normal upright position. Make sure the seat back is latched in the upright position.

WARNING: IF THE SECOND SEAT BACK OR OPTIONAL THIRD SEAT BACK IS NOT SECURELY LATCHED, PASSENGERS OR OBJECTS COULD BE THROWN AND INJURY COULD OCCUR IN THE EVENT OF A SUDDEN STOP OR COLLISION.

PUSH DOWN
ON BUTTON
TO FOLD
DOWN
SEAT BACK

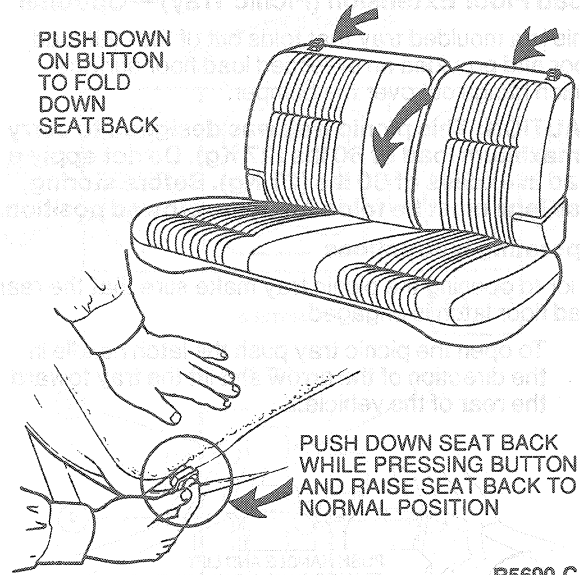

PUSH DOWN SEAT BACK
WHILE PRESSING BUTTON
AND RAISE SEAT BACK TO
NORMAL POSITION

R5690-C


Rear Facing Third Seat (Optional)

NOTE: Before folding down the seat back to make a flat cargo floor, place the safety belt buckles in the opening between the cushion and seat back.

The wagon third seat is a rear facing seat with a movable cushion. The seat back folds on top of the cushion and a second panel hinged to the top of the seat folds again to provide a flat load floor.

To open the seat, lift up the handle in the load floor and fold the load floor panel forward in the vehicle. Then lift up the remote latch release located on the LH side of the load floor and fold the remaining load floor panel forward in the vehicle. Check to see that the seat back is latched in the upright position.

To return the seat to its stowed position, lift up the remote latch release handle and pull the seat back down to the load floor position. The remaining portion of the open load floor panel can be lowered into its initial load floor position.

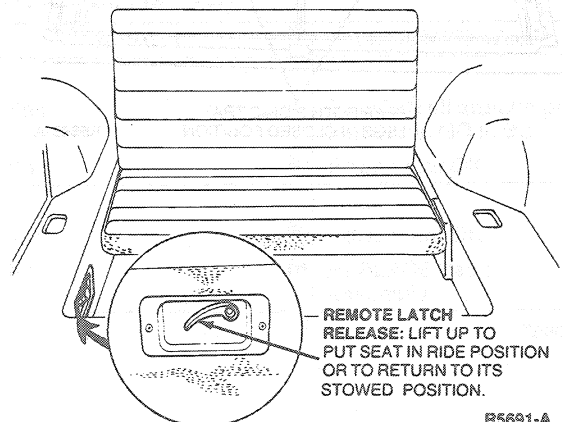

REMOTE LATCH
RELEASE: LIFT UP TO
PUT SEAT IN RIDE POSITION
OR TO RETURN TO ITS
STOWED POSITION.

R5691-A