
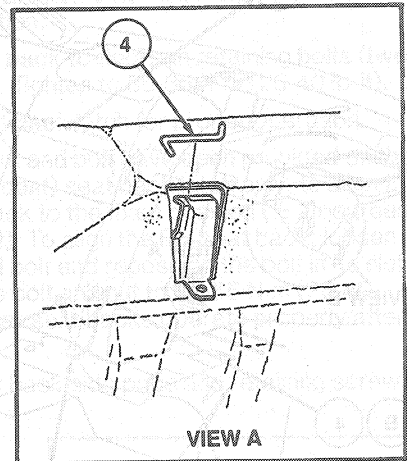


REMOVAL AND INSTALLATION (Continued)

(Continued) REMOVAL AND INSTALLATION

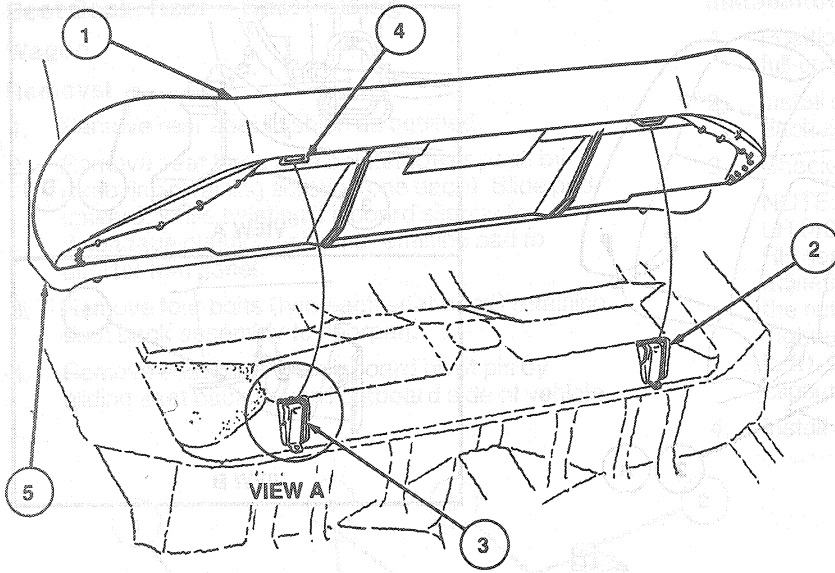


R4164-B

Item	Part Number	Description
1	600A88	Rear Seat Cushion
2	13000	Carpet
3	63370	Retainer
4	63160	Spring Assy
5	672A18	Rear Seat Back

Seat Back Rest, Rear—Sedan

Removal

1. Remove rear seat cushion as outlined.
NOTE: Safety belt bolts do not secure seat back to vehicle.
2. Remove seat back bracket retaining bolts.
3. Grasp seat back assembly at the bottom and lift up to disengage the hanger wire from the retainer brackets.

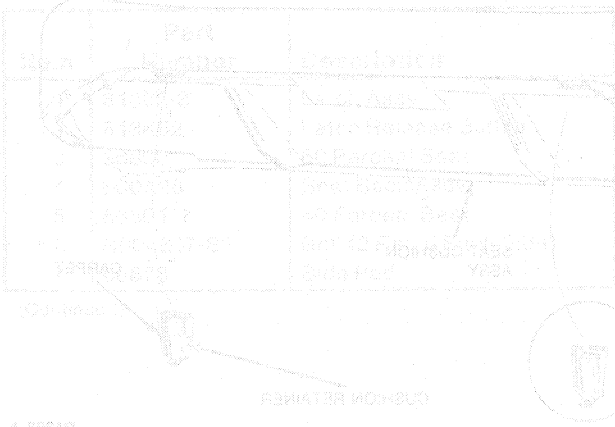

Installation

1. Position seat back in vehicle so that the hanger wires are engaged with the retaining brackets.
2. Install seat back bolts and tighten to 4.3-6.3 N-m (39-55 lb-in).
3. Install rear seat cushion as outlined.

