

REMOVAL AND INSTALLATION (Continued)

Item	Part Number	Description
9	—	Remote Release Cable Eyelet
10	—	Screw (8 Req'd)
11B	N620480-S2	Nut (3 Req'd)
12	613K52	Remote Control Assy

(Continued)


Item	Part Number	Description
13	624A14	Trim Plate
14	624A08	Bezel
15	62432	Latch Release Button
A		Tighten to 35-55 N·m (26-40 Lb-Ft)
B		Tighten to 7-11 N·m (6-8 Lb-Ft)

In-Vehicle

The following procedure is to be used when the rear seat back is locked in the down position, in the vehicle, and the remote release does not operate.

Removal and Installation

1. Insert a screwdriver, 20cm (8 inches) long or more, into the back of rear seat back until it contacts the actuator pin.

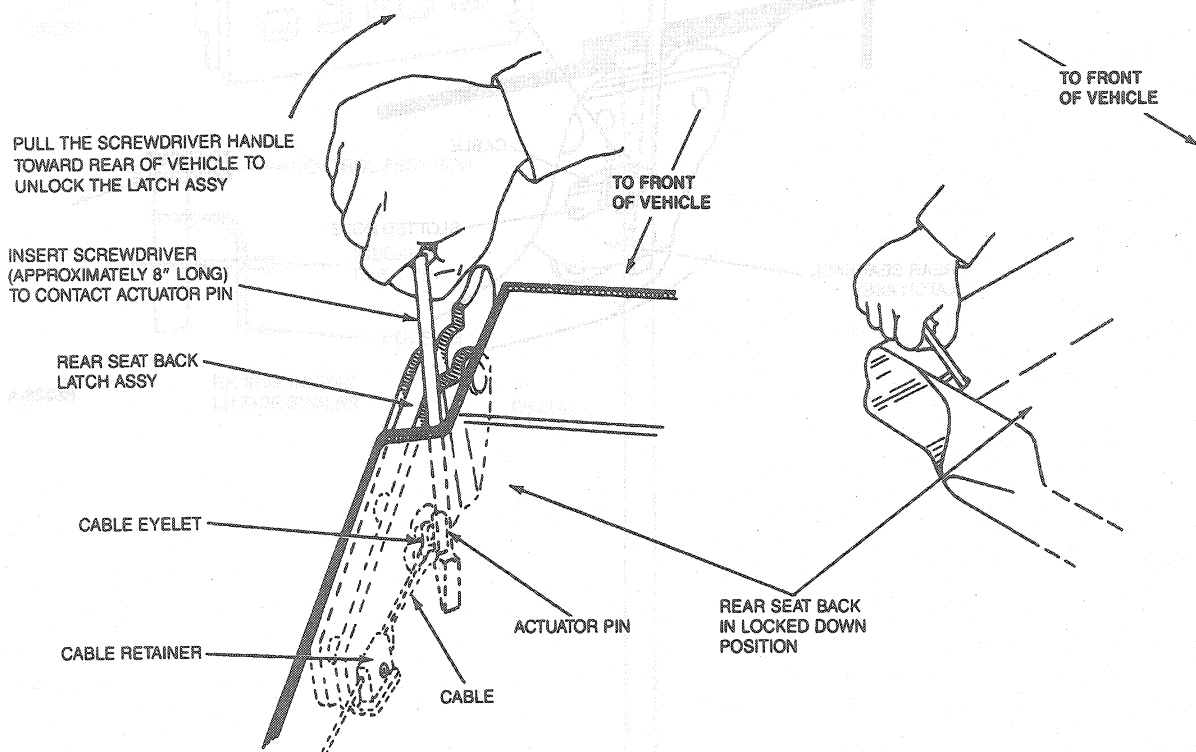

R6325-A