


REMOVAL AND INSTALLATION (Continued)

2. Pull the screwdriver handle toward the rear of vehicle and push down on the seat cushion until back latch assembly unlocks and moves the rear seat back into the "UP" position.

PULL SCREWDRIVER HANDLE TOWARD REAR OF VEHICLE TO UNLOCK THE LATCH ASSY

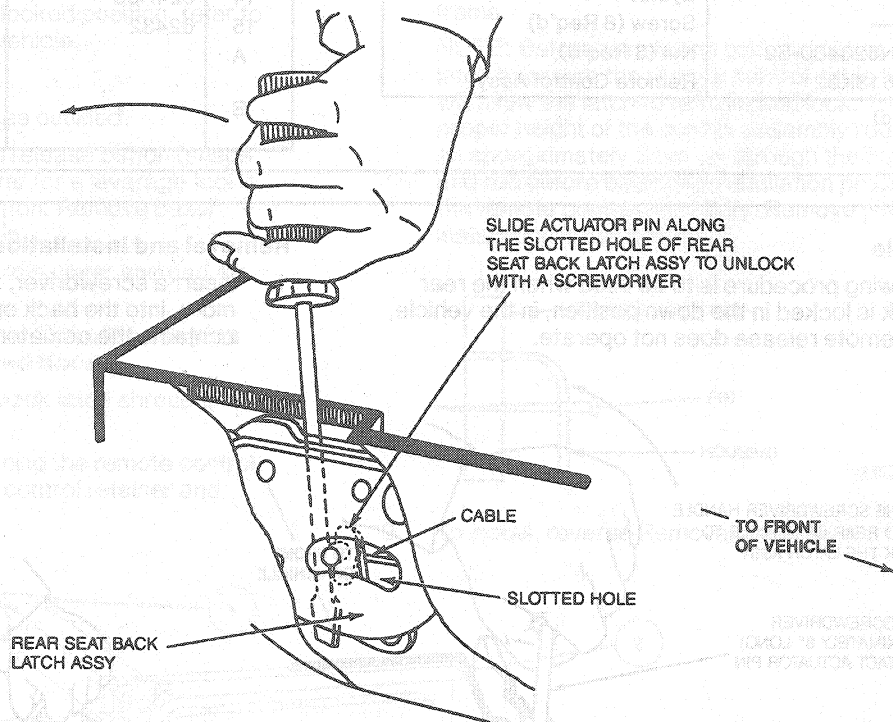

R6326-A

Item	Part Number	Description
1	80548 RH 80547 LH	Remote Control Retainer Seat Back Power Assy
3		Push Pin (8 Part's)
4	813A39 RH 813A39 LH	Seat Back Fabric Assy

(Continued)

Item	Part Number	Description
5A	862L450-C2	Pin-to-Latch Retaining Nut (2 Part's)
6	81362-B	Seat Back Latch Assy
8	86903-B2	Screw

(Continued)