


REMOVAL AND INSTALLATION (Continued)

3. Remove rear seat back side bolster pad and cover assembly by depressing the seat cushion near the pad and cover assembly to get access to the retaining screw and remove the screw.

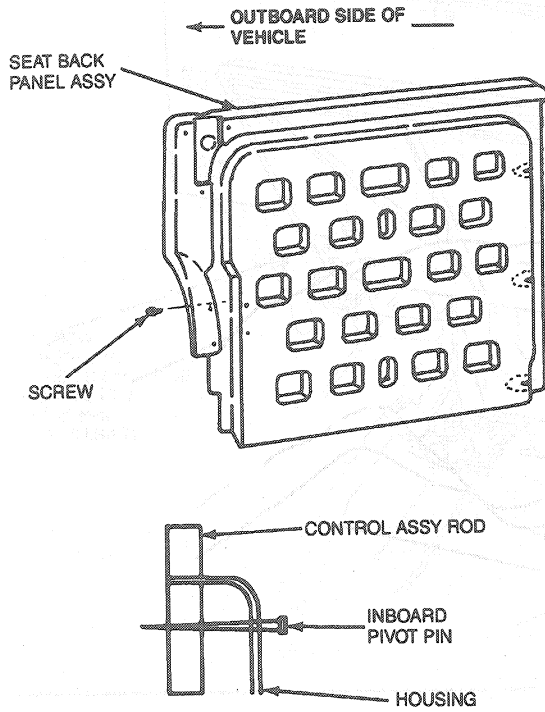

RH SIDE SHOWN
LH SIDE SIMILAR

R6327-A

4. Unzip the rear seat back cover and roll it inside out to expose the rear seat back latch control assembly.
5. Remove three nuts retaining the control assembly to the rear seat back panel assembly.
6. Remove the screw holding the cable retainer to the rear seat back latch assembly.
7. Rotate cable eyelet 90 degrees and remove it from the actuator pin of the latch assembly.
8. Remove the broken rear seat back latch control assembly and throw it away.
9. Obtain a new control assembly, (E6DZ-74613K52-A), and install it to the rear seat back.
10. To install, reverse Removal procedure.