


## REMOVAL AND INSTALLATION (Continued)

11. Repeat for the opposite side of the rear seat back, if necessary.

**WARNING: DO NOT STRIKE OR FORCE THE REAR SEAT BACK LATCH CONTROL RELEASE BUTTON. IF THE REAR SEAT BACK IS IN THE DOWN AND LOCKED POSITION, PUSH DOWN ON THE REAR SEAT BACK AND ACTIVATE THE LATCH RELEASE BUTTON AT THE SAME TIME TO RELIEVE STRESS ON THE CONTROL WHILE IT UNLOCKS. THEN PULL THE REAR SEAT BACK TO THE "UP" POSITION.**

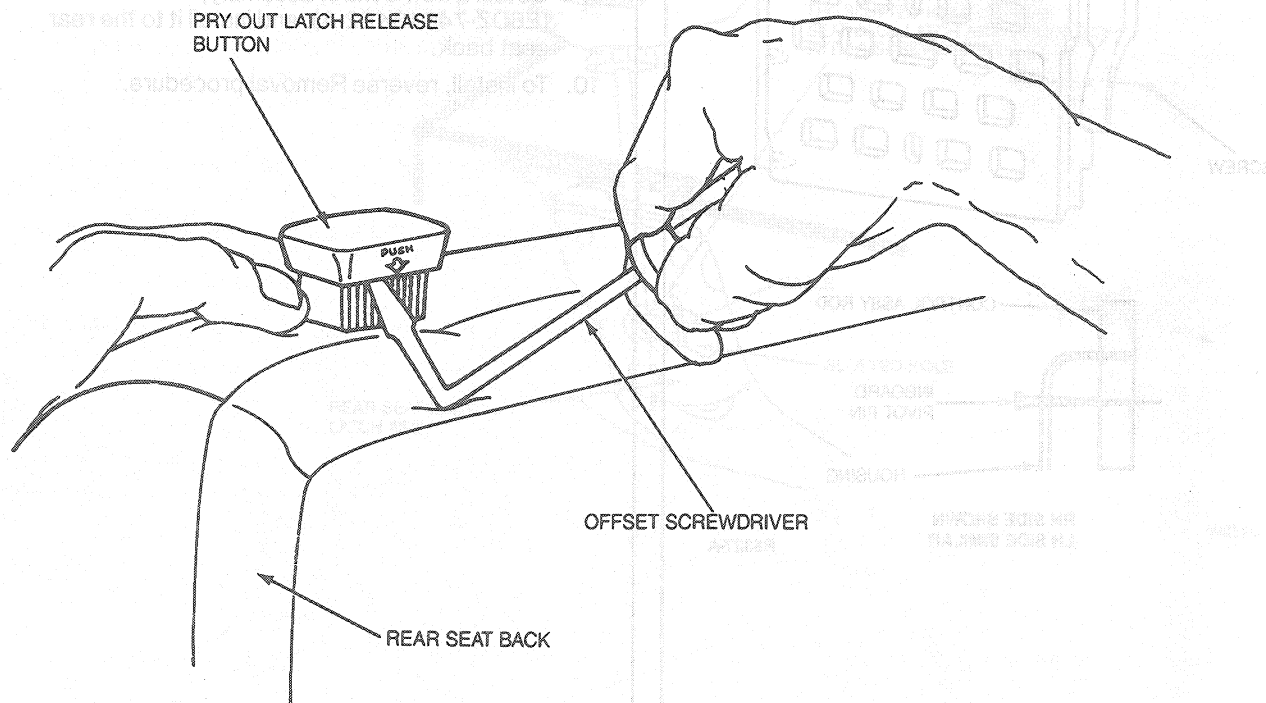

R6328-A

**Seat Cushion, Auxiliary—Wagon****Removal and Installation**

1. Open liftgate.
2. Position auxiliary seat back into latched position.
3. Remove RH and LH auxiliary safety belt retaining nuts. Lift cushion assembly out of vehicle.
4. To install, reverse Removal procedure.

**Seat Back, Auxiliary—Wagon****Removal and Installation**

1. Remove auxiliary seat cushion as outlined.
2. Disengage retainers at top of back panel between load floor and seat back assembly.
3. Pull seat back assembly up to remove.