

REMOVAL AND INSTALLATION (Continued)

Seat Cushion Trim Cover, Front**Removal**

1. Remove seat and track assembly from the vehicle as outlined. Place seat on a clean surface.
2. Remove seat back and seat tracks from the cushion.
3. Disengage plastic J-retainers from seat cushion frames. Remove trim cover.
4. Pull cover back and cut wire retaining hog rings. Remove trim cover.
5. Remove pad assembly, if necessary, by cutting hog rings from underside of cushion pad.

Installation

1. Install pad assembly, if removed, and secure with hog rings.

2. Transfer all bolster tiedown wires to their respective listings in new cover assembly.
3. Position trim cover over pad and frame assembly, with listing exposed. Install tiedown wire in the listing, secure tiedown wire to pad with three hog rings.
4. Install plastic J-retainers to frame.
5. Install seat tracks and back assembly to cushion frame as outlined.
6. Install seat and track assembly as outlined.
7. Check seat tracks for proper operation.