


## REMOVAL AND INSTALLATION

**Back Trim Cover, Front Seat****Removal and Installation**

1. Remove front seat and track assembly from vehicle. Refer to Section 01-10A. Place seat on a clean surface.
2. Remove four screws from the front seat cushion side shield.

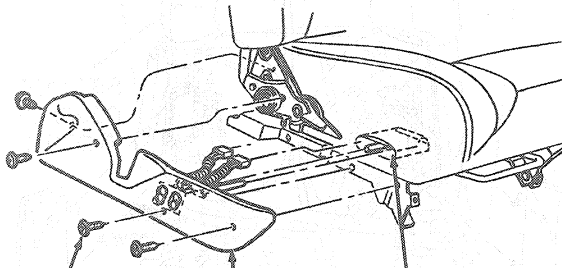

SCREW  
56906-S55  
4 REQ'D


SHIELD ASSY  
62186

PRE-CUT  
HOLE W/J-RETAINER

PASSENGER SEAT SHOWN  
DRIVER SEAT TYPICAL

R6224-B


3. Disconnect lumbar, bolster and pump tubes from switch assembly.
4. Disconnect lumbar and bolster electrical connectors from seat wiring harness and remove shield from seat.

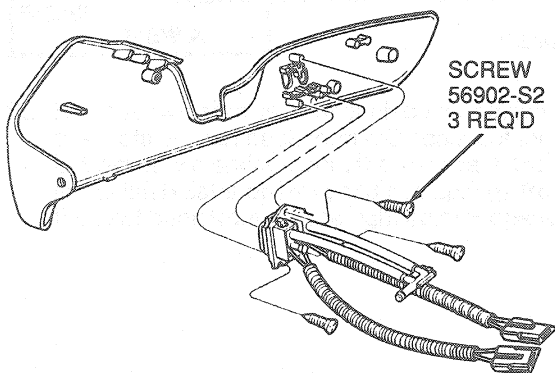


SCREW  
56902-S2  
3 REQ'D

R6225-B

5. Remove two bolts from seat back recliner-to cushion frame and track assembly.
6. Disconnect the bolster and lumbar tubes between seat back and cushion frame.

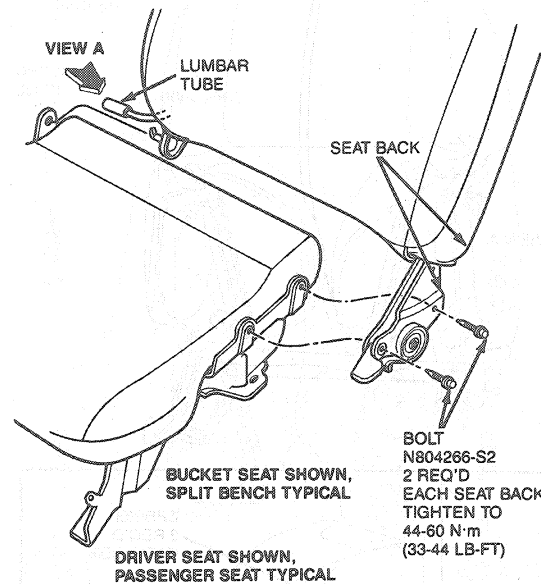

BOLT  
N804266-S2  
2 REQ'D  
EACH SEAT BACK  
TIGHTEN TO  
44-60 N·m  
(33-44 LB-FT)

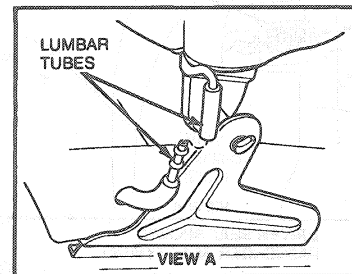

R7017-A

7. Refer to Section 01-10A for head restraint removal. Unhook the J-retainers at the bottom of the seat back trim covers (same as base seat).
8. Disconnect three J-retainers from the left bolster pad armature and three J-retainers from the right bolster pad armature. Pull trim cover from left and right bolster pad armatures leaving both bolster pad armatures exposed.