
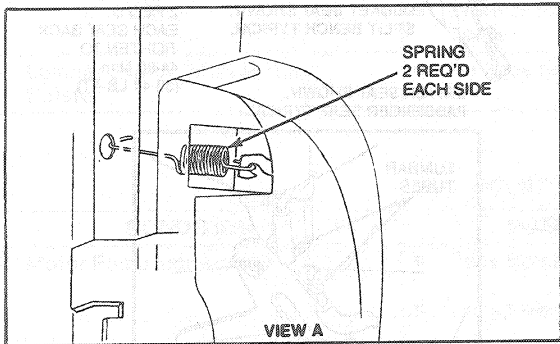




REMOVAL AND INSTALLATION (Continued)

- 9. Disconnect two springs from the left bolster pad armature and two springs from the right bolster pad armature.

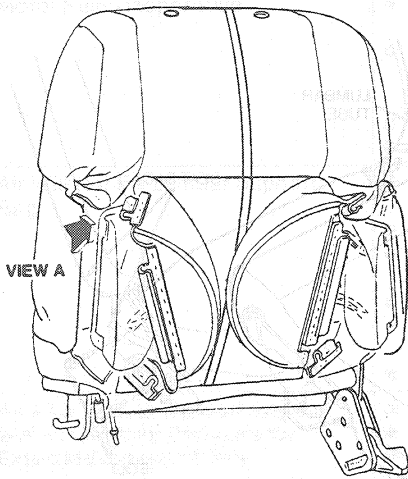

DRIVER SEAT SHOWN, PASSENGER SEAT TYPICAL R6248-A

- 10. Disconnect the top and bottom guide arms of the left bolster pad armature from the left bolster guide and the top and bottom guide arms of the right bolster pad armature from the right bolster guide.

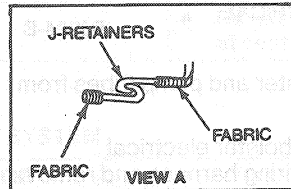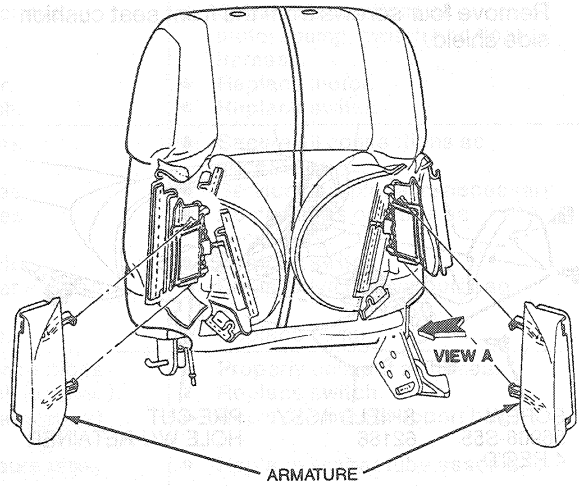

DRIVER SEAT SHOWN, PASSENGER SEAT TYPICAL R6249-A