

SECTION 01-11 Glass, Frames and Mechanisms

SUBJECT	PAGE	SUBJECT	PAGE
ADJUSTMENTS		REMOVAL AND INSTALLATION (Cont'd.)	
Door Glass, Front	01-11-27	Relay / Timer	01-11-26
Door Glass, Rear	01-11-28	Switch	01-11-23
DESCRIPTION AND OPERATION		Window	01-11-26
Defroster, Rear	01-11-2	Window Motor	01-11-24
Window Switches	01-11-1	Window Regulator, Front	01-11-13
LUBRICATION	01-11-6	Window Regulator, Rear	01-11-15
MAJOR SERVICE OPERATIONS		Window Switch Connector Wire	01-11-23
Grid Wire Service	01-11-26	Window, Rear	01-11-19
Terminal Service	01-11-27	Windshield/Rear Window Glass—Urethane Seal	01-11-16
REMOVAL AND INSTALLATION		SPECIAL SERVICE TOOLS	01-11-29
Defroster, Rear	01-11-25	SPECIFICATIONS	01-11-29
Door Glass Run Assembly, Front	01-11-11	TESTING	
Door Glass Run Assembly, Rear	01-11-12	Defroster, Rear	01-11-9
Door Glass Stabilizer Assembly, Front	01-11-11	Grid Wire Test	01-11-9
Door Glass, Front	01-11-10	Switch Test	01-11-9
Door Glass, Rear	01-11-10	Switch Tests	01-11-7
Glass and Channel Assembly, Rear Door	01-11-15	Window Down Module, One Touch	01-11-8
Liftgate Glass	01-11-24	Window Motor	01-11-6
Mouldings	01-11-16	VEHICLE APPLICATION	01-11-1
Quarter Window	01-11-20		

VEHICLE APPLICATION

Taurus/Sable.

DESCRIPTION AND OPERATION

Window Switches

The power window switches are located on the front door trim panels. The master control switch is located on the driver's armrest and can be used to activate any or all of the power windows from one location.

