
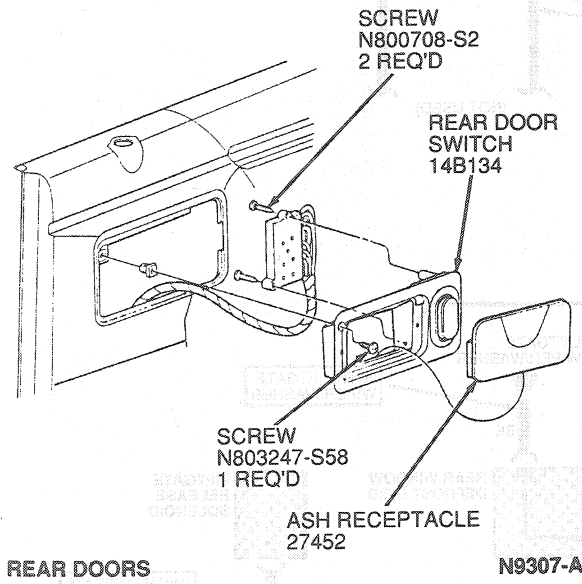


DESCRIPTION AND OPERATION (Continued)

A single power window switch is located on the front passenger's armrest and on the rear passengers' door trim panels. This switch allows activation of the power window for the individual doors only.

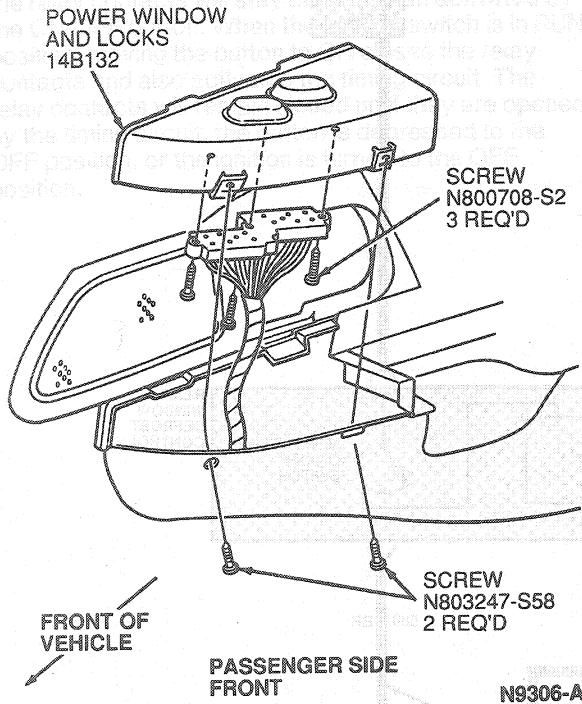

Defroster, Rear

When the control switch is activated by the push button, current is directed to the grid wires on the rear window. The heated grid wires keep the rear window clear of fog or ice.

The integral timer for Taurus and remote timer for Sable automatically turn off the heating grid after approximately 10 minutes of operation. If more than 10 minutes of use is needed, the grid can be reactivated for another 10 minutes by pushing the push button to the ON position. This operation can be repeated as required.

Power for the control timer and relay coil comes from the RUN terminal of the ignition switch and from a wire containing a fuse link connected to the starter relay.

