

DESCRIPTION AND OPERATION (Continued)

DESCRIPTION AND OPERATION (Continued)

Sable

The rear window defrost grid is fed through the relay contacts from the fuse link wire. The input to the rear defrost control assembly for Taurus or timer / relay module for Sable from the ignition switch determines if the relay contacts will stay closed when activated by the ON-OFF button. When the ignition switch is in RUN position, moving the button to ON closes the relay contacts and also activates the timing circuit. The relay contacts will remain closed until they are opened by the timing circuit, the button is depressed to the OFF position, or the ignition is turned to the OFF position.

The circuit is protected by a fuse located in the fuse panel and a fuse link.
The operating button is spring-loaded to return from ON or OFF to its center (normal) position.

