
REMOVAL AND INSTALLATION (Continued)

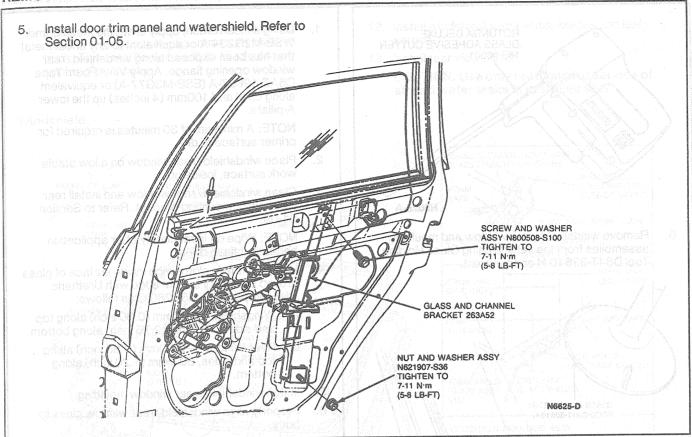

Mouldings

The windshield and rear window mouldings on most models are on the edge of glass. The moulding can be removed with the glass.

NOTE: Sable rear window does not have removable mouldings.

Windshield/Rear Window Glass—Urethane Seal

Removal

: (3.6) (1.6) (1.6) (1.6) (1.6) (1.6) (1.6) (1.6) (1.6) (1.6) (1.6) (1.6) (1.6) (1.6) (1.6) (1.6) (1.6) (1.6) Tools Required:

- Glass Holding Tool D81T-33610-H
- Rotunda Deluxe Glass Adhesive Cutter 163-00001
- Rotunda Glass Adhesive Cutter 118-00050
- 1. Remove windshield wiper arms and blades, if rear window is being removed. Disconnect heated rear window on equipped models.
- 2. Remove mouldings.
- Remove leaf screen. On rear window, remove finisher portion of moulding by zipping it out of moulding slot.

- Remove windshield rear view mirror.
 - Loosen mirror mounting bracket setscrew.
 - Pull mirror assembly upward to remove from windshield retainer.
- Use Rotunda Glass Adhesive Cutter 118-00050, or Rotunda Deluxe Glass Adhesive Cutter 163-00001 or equivalent to cut sealer. Refer to manufacturer's instructions when using tool.

WARNING: SAFETY GLASSES AND GLOVES MUST BE WORN.

CAUTION: Use care to avoid damage to the instrument panel or rear package tray cover

