



REMOVAL AND INSTALLATION (Continued)

Taurus

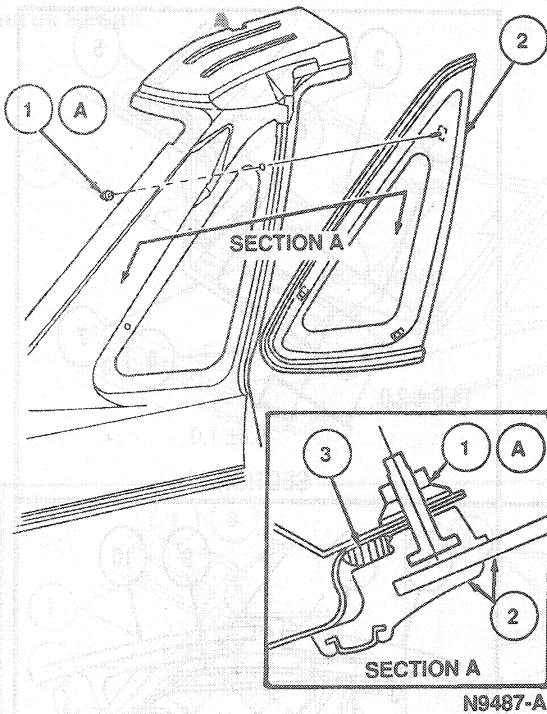

| Item | Part Number | Description |
|------|--------------|---------------------------------|
| 1A | N620360-S36 | Nut (4 Req'd Each Window) |
| 2 | 29700 | Window Assy |
| 3 | ESB-M4G299-A | Seal Assy |
| A | | Tighten to 1-2 N·m (9-18 Lb·In) |

Sable

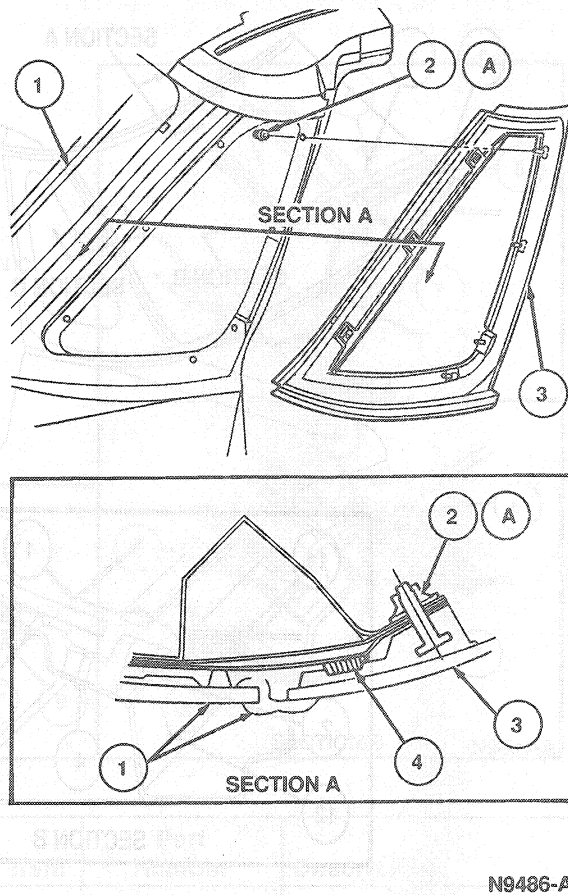

| Item | Part Number | Description |
|------|-------------|---------------------------------|
| 1 | — | Rear Window Assy |
| 2A | N620360-S36 | Nut (7 Req'd Each Window) |
| 3 | 29700 | Window Assy |
| 4 | ESB-M4G29-A | Quarter Window Seal Assy |
| A | | Tighten to 1-2 N·m (9-18 Lb·In) |

Wagon

Tools Required:

- Rotunda Glass Adhesive Cutter 118-00050

Removal

1. Remove interior trim panels. Refer to Section 01-05.
2. From inside vehicle, use a screwdriver to remove spring retainers.
3. Using Rotunda Glass Adhesive Cutter 118-00050 or Rotunda Deluxe Glass Adhesive Cutter 163-00001, or equivalent, cut urethane seal around entire edge of quarter window.
NOTE: If glass is shattered, cutting urethane seal is also permissible.
4. Remove quarter glass.