


REMOVAL AND INSTALLATION (Continued)

22. Pull up to unsnap RH and LH speaker opening covers and remove.

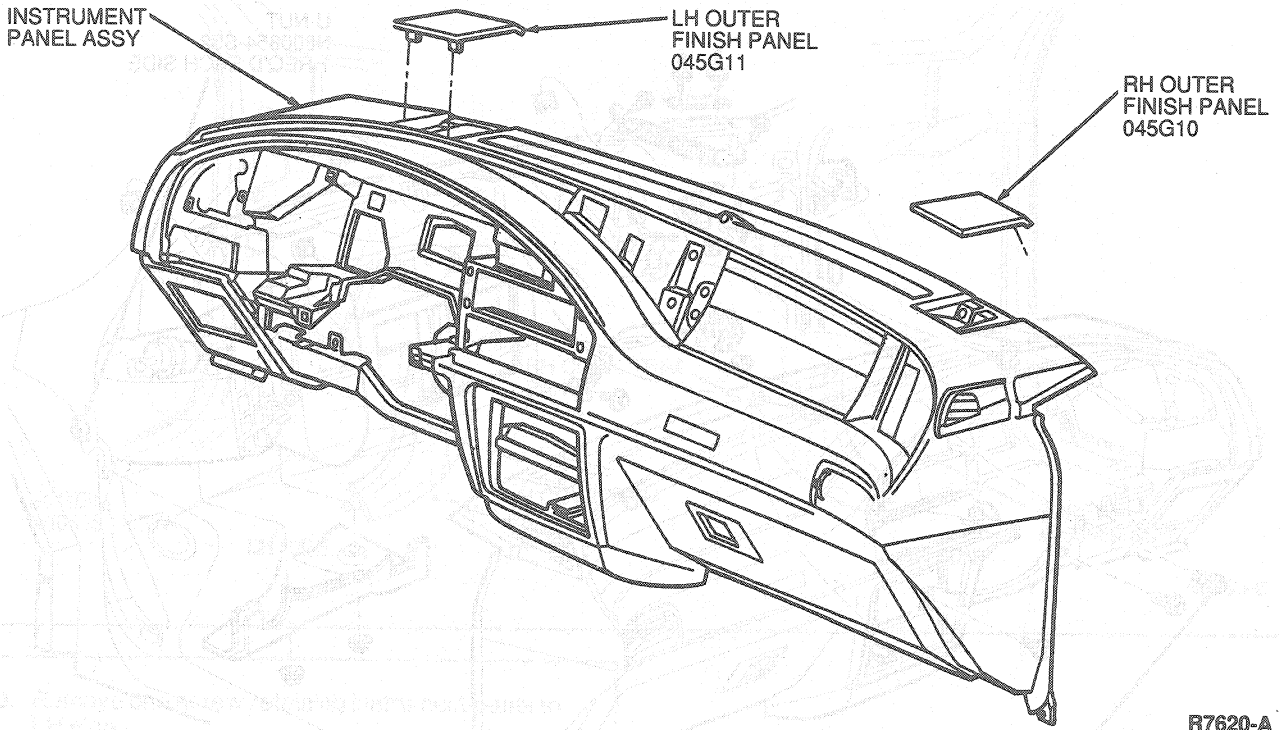

23. Using steering column and glove compartment openings and by reaching under instrument panel, disconnect all electrical connections, vacuum hoses, heater-A/C control cables and radio antenna cable.

