

SECTION 01-14A Handles, Locks, Latches and Mechanisms


SUBJECT	PAGE	SUBJECT	PAGE
ADJUSTMENTS		REMOVAL AND INSTALLATION (Cont'd.)	
Door Latch Striker	01-14A-18	Door Lock Switch, Power	01-14A-4
Hood Latch	01-14A-19	Door Outside Handle.....	01-14A-9
Latch, Liftgate	01-14A-19	Door Striker	01-14A-10
Latch, Luggage Compartment	01-14A-19	Glove Compartment Latch and Lock	01-14A-18
Striker, Liftgate Latch	01-14A-18	Hood Latch.....	01-14A-12
DESCRIPTION AND OPERATION		Hood Latch Control Cable	01-14A-11
Child Safety Lock	01-14A-2	Latch and Cable, Fuel Filler Door	
Door Locks, Power	01-14A-1	Remote	01-14A-10
Luggage Compartment Release	01-14A-2	Latch and Lock, Luggage Compartment Deck	
DIAGNOSIS AND TESTING		Lid	01-14A-13
Motor	01-14A-2	Latch and Striker, Liftgate	01-14A-14
Power Door Lock Switch Test	01-14A-3	Latch Striker Assembly, Luggage	
LUBRICATION		Compartment Deck Lid.....	01-14A-13
Hood and Deck Lid		Lock Cylinder	01-14A-16
Latches—Lubricant	01-14A-19	Luggage Compartment Remote Control Cable	
Lock Cylinder Lubricant.....	01-14A-19	and Latch.....	01-14A-17
REMOVAL AND INSTALLATION		Remote Luggage Compartment	
Door Latch Bellcrank, Rear	01-14A-9	Release.....	01-14A-16
Door Latch Remote Control, Front or		Striker Anchor Plate	01-14A-16
Rear	01-14A-9	Support Cylinder, Liftgate.....	01-14A-14
Door Latch, Front	01-14A-5	SPECIAL SERVICE TOOLS.....	01-14A-20
Door Latch, Rear.....	01-14A-7	SPECIFICATIONS.....	01-14A-19
Door Lock Actuator Motor, Power Locks	01-14A-4	VEHICLE APPLICATION	01-14A-1
Door Lock Cylinder.....	01-14A-9		

VEHICLE APPLICATION
Taurus/Sable.

DESCRIPTION AND OPERATION

Door Locks, Power

The power door lock control system uses electric switches mounted on the front door armrests.

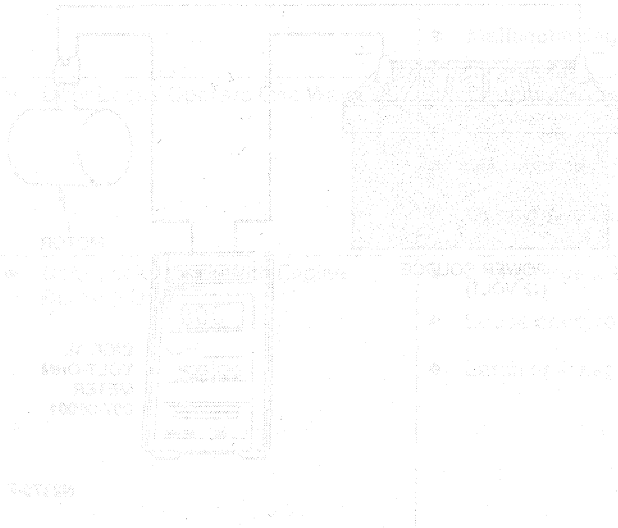

To lock doors, push down on the raised portion of the rocker switch (marked "L").

To unlock the doors, push the depressed portion of the rocker switch (marked "U").