

REMOVAL AND INSTALLATION (Continued)


Door Latch, Rear

Tools Required:

- Heavy Duty Riveter D80L-23200-A

Removal

1. Remove door trim panel and watershield. Refer to Section 01-05.
2. Remove door latch shield from latch and check all connections of remote control links and rods. Service as necessary.
3. Remove three screws retaining latch. Remove latch from door.
4. Remove bellcrank attaching rivet and bellcrank.
5. Remove remote control assembly (with link retaining clip).
6. Remove door latch rod retaining clip from door latch bracket assembly.
7. Remove rivet from actuator motor, if so equipped.

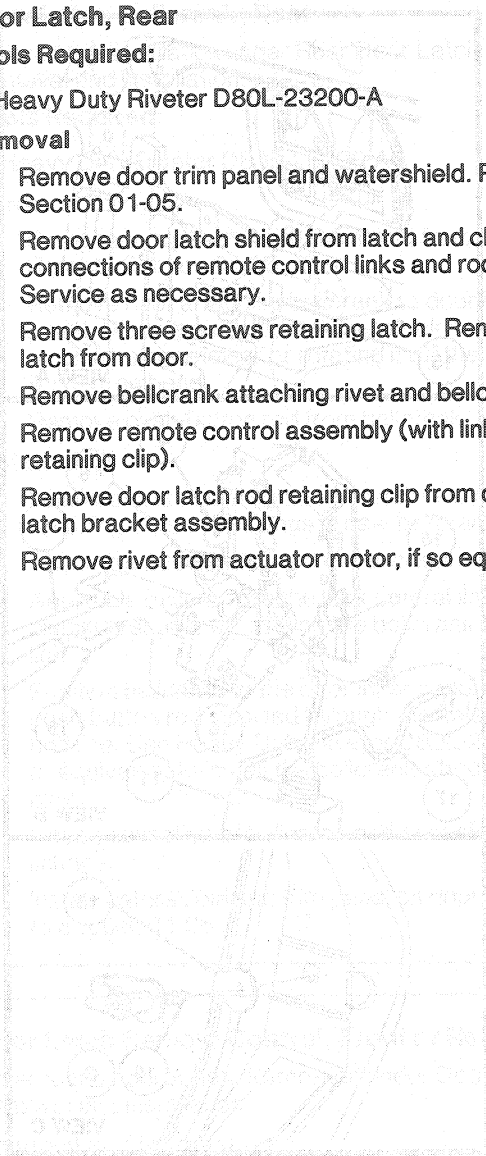


Item	Number	Description
1	1	Door Latch
2	2	Door Latch Shield
3	3	Door Latch Rod Retaining Clip
4	4	Bellcrank
5	5	Remote Control Assembly
6	6	Actuator Motor
7	7	Door Latch Bracket

8. Remove latch and actuator as an assembly from door.

Installation

1. Install new bushings and clip onto latch assembly.
2. Install remote control slide links and power lock actuator motor onto latch assembly. Install latch with links and actuator motor into door cavity.
3. Position latch assembly to door, aligning screw holes in latch and door. Install three screws. Tighten to 4-8 N-m (3-6 lb-ft).
4. Install door latch shield.
5. Install bellcrank to inner door panel. Use Heavy Duty Riveter D80L-23200-A or equivalent to install bellcrank attaching rivet.
6. Open and close door to check latch component operation.
7. Install watershield and door trim panel. Refer to Section 01-05.

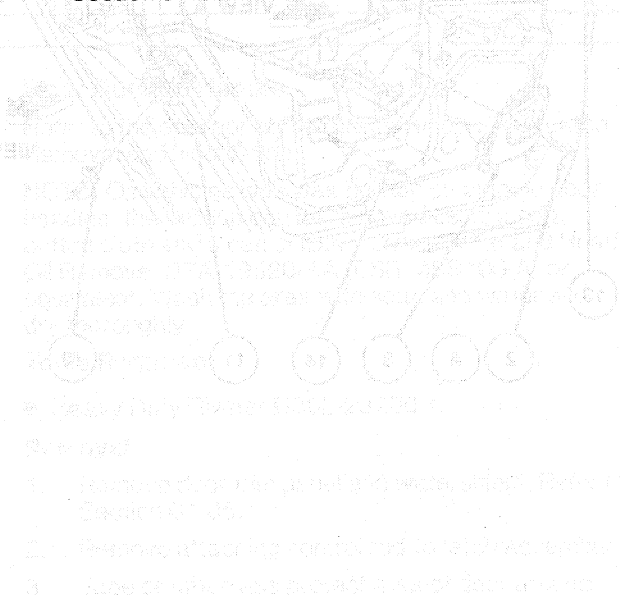

Item	Number	Description
1	1	Door Latch
2	2	Door Latch Shield
3	3	Door Latch Rod Retaining Clip
4	4	Bellcrank
5	5	Remote Control Assembly
6	6	Actuator Motor
7	7	Door Latch Bracket