

REMOVAL AND INSTALLATION (Continued)

Item	Part Number	Description
1	43505	Lock and Key Set
2	43625	Lock Cylinder Pad
3	432A48	Lock Cylinder Support
4	43627	Plate
5B	N602701-S2	Screw and Washer Assy (1 Req'd)
6	40182	Clip Retainer
7	43200 43282	Latch Assy


(Continued)

Item	Part Number	Description
8A	N807260-S100	Screw and Washer Assy (2 Req'd)
9	404B12	Striker Assy
10A	N802319-S36M	Screw and Washer Assy (2 Req'd)
11	375203-S	Rivet (1 Req'd)
12	43629	Lock Cylinder Retainer
13	433A28	Seal
A		Tighten to 9-14 N·m (7-10 Lb-Ft)
B		Tighten to 2.6-3.8 N·m (24-33 Lb-In)

Support Cylinder, Liftgate

Removal


1. Open the liftgate and temporarily support it.
2. The lift cylinder end fitting is a spring-clip design and removal is accomplished by sliding a small screwdriver under it and prying up to remove from the ball stud.

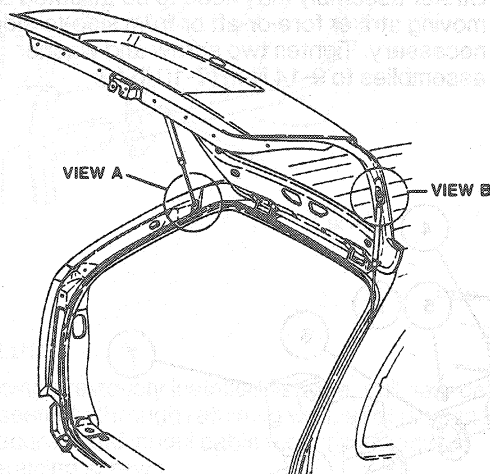

3. Remove the support cylinder.

Installation

1. Install each cylinder to C-pillar and liftgate bracket ball socket by pushing the cylinder's locking wedge onto the socket.
2. Close liftgate. Check support cylinder operation.

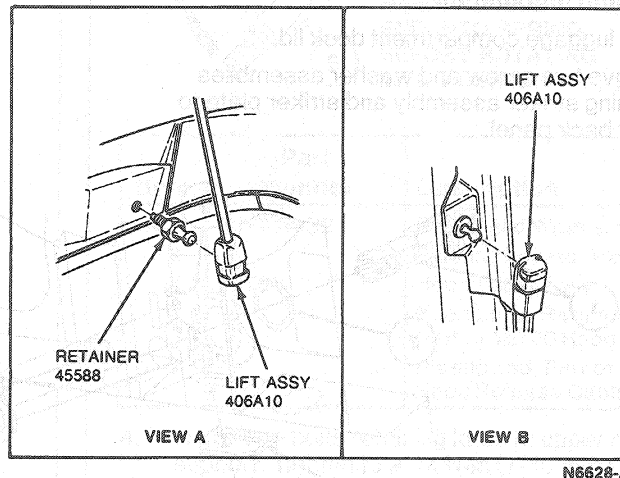

Latch and Striker, Liftgate

Removal and Installation

1. Remove the liftgate interior trim panel. Refer to Section 01-05.
2. Remove latch rod from control assembly lever by pulling the rod towards LH side of liftgate with moderately heavy force.

3. Remove three screws retaining the latch assembly to liftgate.
4. Disengage lock cylinder rod at latch lever.
5. Remove the latch assembly from the liftgate. Disconnect electrical connection.
6. To install, reverse Removal procedure.