

REMOVAL AND INSTALLATION (Continued)

Striker Anchor Plate

Removal and Installation

1. Remove striker assembly as outlined.
2. Locate the drill dimple in the outside lower back panel just below the striker. Using a 42mm (1-5/8 inch) hole saw, drill an access hole using the drill dimple as a center locator.

3. Remove anchor plate and replace with a new one.
NOTE: An M10 x 1.5 nut and washer assembly can be used if a new striker plate is not available.
4. Install and adjust striker as outlined.
5. Seal access hole with plug or body tape.

Lock Cylinder

Removal and Installation

Refer to the illustration following Latch and Striker, Liftgate Removal and Installation.




1. Remove the liftgate latch assembly as outlined.
2. Remove the retainer away from the lock cylinder (with the lock-to-latch rod still attached) from the liftgate.
3. To install, reverse Removal procedure.

Remote Luggage Compartment Release

Removal and Installation

1. From inside luggage compartment, disengage retaining remote release cables to latch assembly.
2. Disconnect fasteners retaining cables to hinge and body.

3. Remove scuff plate/body center pillar trim panel. Refer to Section 01-05.
4. Pull floor covering back to expose two remote release retaining screws. Remove screws and remote release assembly.
5. To install, reverse Removal procedure.

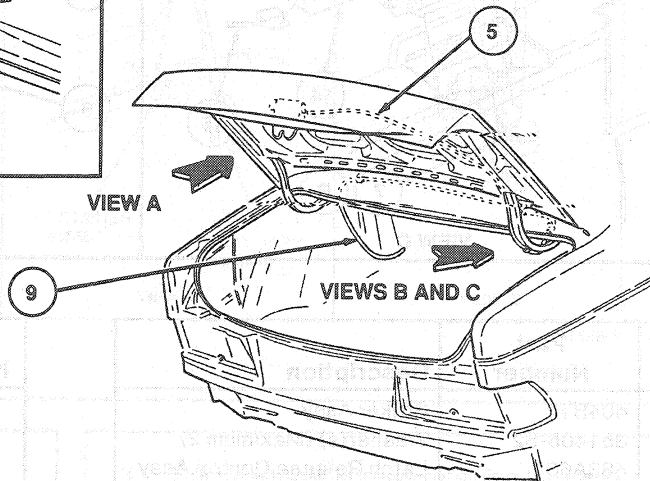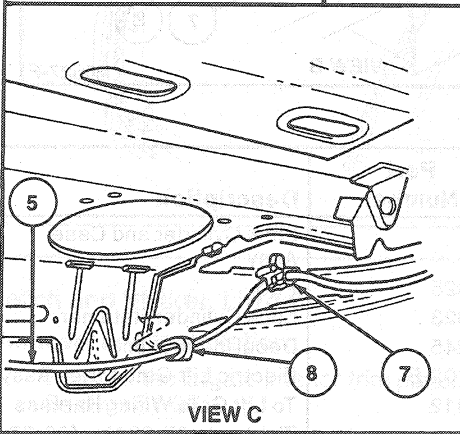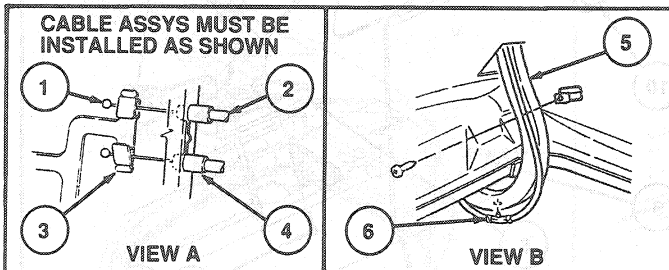

N6633-G

| Item | Part Number | Description |
|------|-------------|----------------------|
| 1 | — | Top Clip |
| 2 | — | Manual Release Cable |

(Continued)

| Item | Part Number | Description |
|------|-------------|------------------------|
| 3 | — | Bottom Clip |
| 4 | — | Release Solenoid Cable |

(Continued)