


REMOVAL AND INSTALLATION (Continued)

(Continued)

Item	Part Number	Description
5	40180	Cable Assy
6	—	Locator Pin, Part of 40180 Cable Assy

Item	Part Number	Description
7	387772-S	Clip
8	382931-S	Clip
9	—	To Remote Release Assy

(Continued)

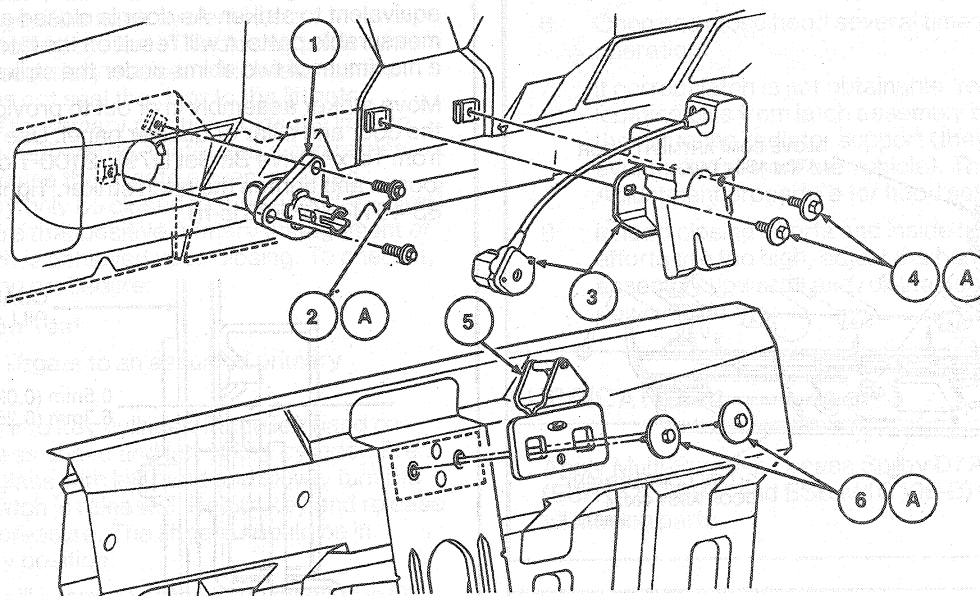

N9260-A

Item	Part Number	Description
1	—	Lock and Key Set
2A	N807260-S100	Screw and Washer Assy (2 Req'd)
3	43200 43282	Latch Assy
4A	N807260-S100	Screw and Washer Assy (2 Req'd)
5	404B12	Striker Assy
6A	N802319-S36M	Screw and Washer Assy (2 Req'd)
A		Tighten to 9-14 N·m (7-10 Lb·Ft)

Luggage Compartment Remote Control Cable and Latch

Removal and Installation

1. Remove LH package tray speaker cover in luggage compartment (Sable only).
2. Remove rear seat head restraints, rear seat cushion and rear seat back. Refer to Section 01-10.
3. Remove LH center body pillar trim panel and front door scuff plate. Refer to Section 01-05.
4. Remove fuel filler cover retaining screw and push pin. Remove cover.
5. Roll back carpet and insulator.

6. Remove three push pins retaining carpet support and remove support.
7. Remove remote filler door and luggage compartment release assembly retaining screws.
8. Disconnect luggage compartment release cable. Pull cable out from harness cover along C-pillar.
9. From luggage compartment, pull cable through and remove cable from clips in luggage compartment and on RH hinge.
10. Remove latch retaining screw and remove cable from latch. Pull cable out from in between deck lid inner and outer panels.
11. To install, reverse Removal procedure.