

OPERATION (Continued)

- 3. Repeat Step 2 to program additional transmitters into the control module (up to four transmitter maximum).
- 4. Turn ignition OFF. All doors should lock then unlock.

5. Check operation.
NOTE: The remote / keyless entry module erases all previous transmitters from memory when the transmitters are programmed or re-programmed. The remote / keyless entry module can store up to four transmitters in memory.

System Wiring


Refer to Section 18-01 for individual wiring harness installations.

DIAGNOSIS

Before proceeding with diagnosis and service of the remote keyless entry electrical operation, check for mechanical binds in the door locks. Operate all door locks several times and check lock operation. Also be sure the battery is fully charged.


The following diagnosis procedures begin with an explanation page on how to use the procedures. Read this carefully before beginning Diagnosis. Refer to the following diagrams and charts for additional information when performing the diagnostic tests.

NOTE: Voltage and resistance readings can be obtained using Rotunda Digital Volt-Ohmmeter 014-00407 or Rotunda Dwell-Tach-Volt-Ohms Tester 059-00010 or equivalent.

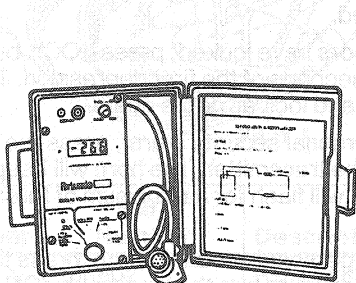


ROTUNDA DVOM 014-00407

OR

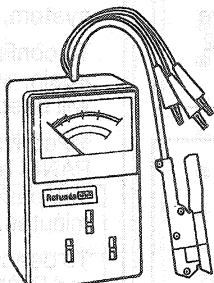

ROTUNDA VOM 059-00010

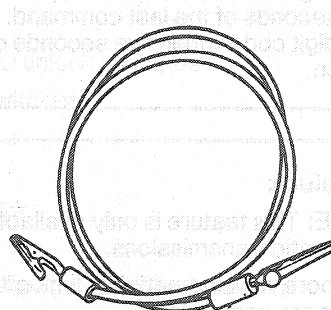

JUMPER WIRE N4958-C