


DIAGNOSIS (Continued)

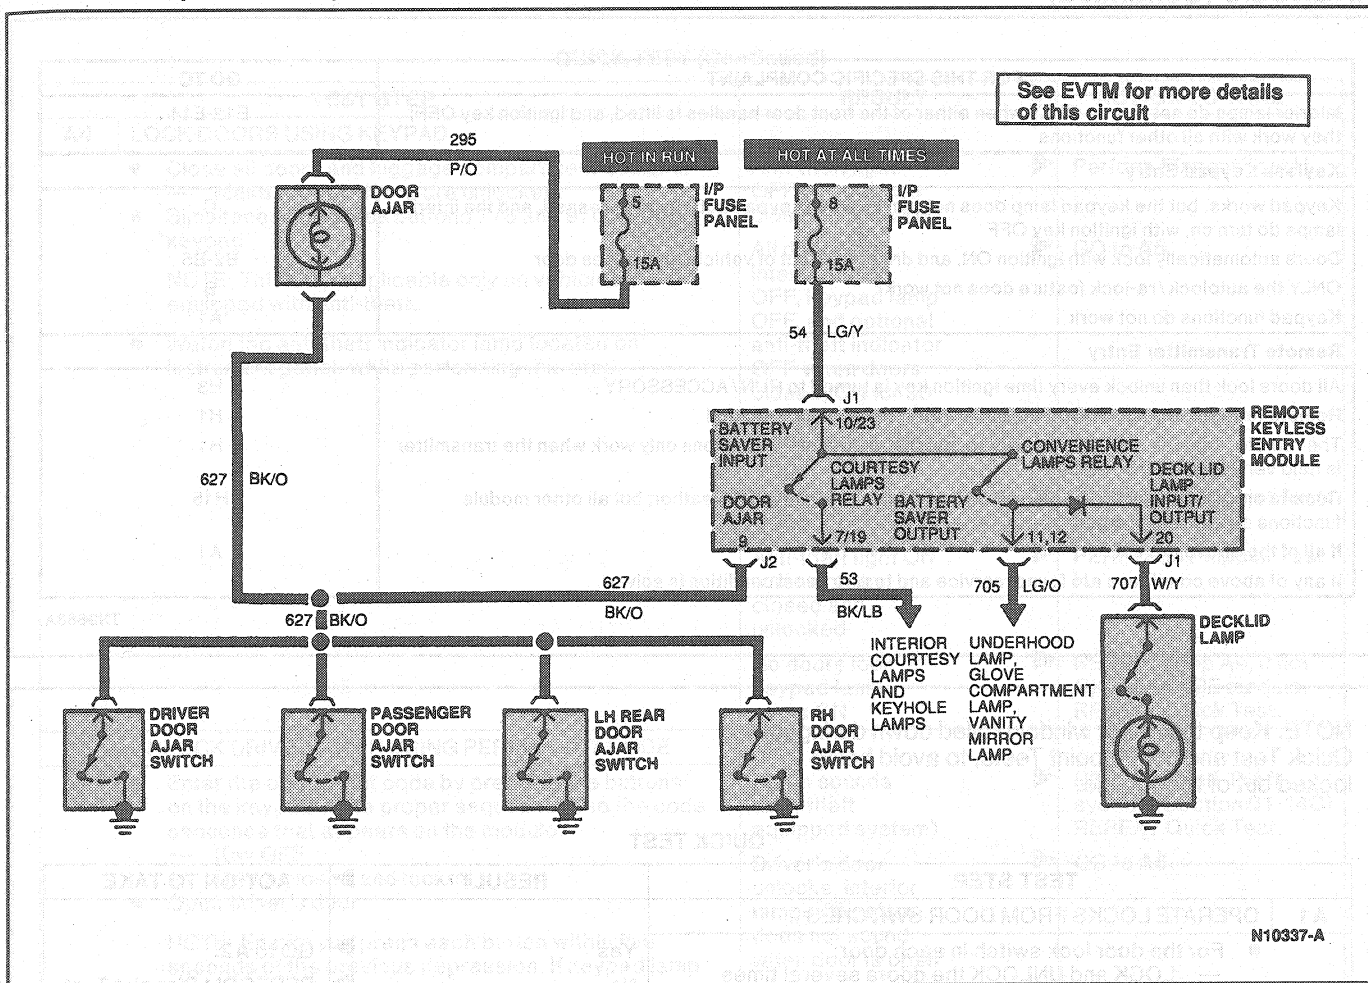

To test and service remote / keyless entry system:

- Perform the Quick Test.
- Perform the Pinpoint Tests as specified by the Quick Test (only perform them when a step of the Quick Test has failed.)

- Service only as specified in the tests.
- Repeat the quick test to make sure the system is operational.

Quick Test

Check that battery is fully charged (if not, it may be causing the concern).

Disconnect and reconnect battery to ensure system is reset.

FOR THIS SPECIFIC COMPLAINT	GO TO
Manual Locks	
Locks bind when manually operated	F
Locks do not operate in freezing	F18
Locks only work when engine is running	F19
Locks work intermittently	F17
Illuminated Entry	
Interior lamps do not turn on with remote / keyless entry functions, when ignition key OFF; they ONLY work when a door is opened	E
Interior lamps do not turn on ONLY when door is opened from inside the vehicle, and ignition key OFF; the interior lamps do work with all other functions	E16

(Continued)