

## DIAGNOSIS (Continued)

DIAGNOSIS (Continued)

FOR THIS SPECIFIC COMPLAINT	GO TO
Interior lamps do not turn on ONLY when either of the front door handles is lifted, and ignition key OFF; they work with all other functions	E12-E14
<b>Keyless Keypad Entry</b>	
Keypad works, but the keypad lamp does not turn on when keypad buttons are pressed, and the interior lamps do turn on, with ignition key OFF	C
Doors automatically lock with ignition ON, and driver gets out of vehicle and closes door	B2-B5
ONLY the autolock / re-lock feature does not work	B
Keypad functions do not work	A1
<b>Remote Transmitter Entry</b>	
All doors lock then unlock every time ignition key is turned to RUN / ACCESSORY	H3
Remote features will not work at all, but all other features operational	H1
The remote / keyless entry system works, but the remote entry functions only work when the transmitter is held very close to the vehicle	H1
Remote entry functions do not operate in freezing or extremely hot weather; but all other module functions do operate properly	H15
If all of the above are OK	A1
If any of above conditions are found: service and test to see if condition is solved.	

TN9668A

NOTE: Keep the driver window rolled down during the Quick Test and the Pinpoint Tests, to avoid being locked out of the vehicle.

## QUICK TEST

TEST STEP	RESULT	ACTION TO TAKE
<b>A1</b> OPERATE LOCKS FROM DOOR SWITCHES		
<ul style="list-style-type: none"> <li>● For the door lock switch in each door:               <ul style="list-style-type: none"> <li>— LOCK and UNLOCK the doors several times using the switch. Check that all the doors lock / unlock properly.</li> </ul> </li> <li>● Do all doors lock / unlock properly from each switch?</li> </ul>	Yes No	GO to A2. PERFORM Pinpoint Test F.
<b>A2</b> CHECK BATTERY SAVER FEATURE		
<ul style="list-style-type: none"> <li>● Sit in vehicle with all doors closed.</li> <li>● Key ON, then OFF.</li> <li>● Turn interior lamps ON with dimmer switch.</li> <li>● Open deck lid.</li> <li>● Do interior lamps and luggage compartment lamps turn on?</li> </ul>	Yes No	GO to A3. PERFORM Pinpoint Test E.
<b>A3</b> ILLUMINATE KEYPAD BY PRESSING KEYPAD BUTTONS		
<ul style="list-style-type: none"> <li>● Use the dimmer switch to turn OFF interior lamps.</li> <li>● Key OFF.</li> <li>● For each button on the keyless entry keypad:               <ul style="list-style-type: none"> <li>— Press button.</li> <li>— Check that the keypad lights up.</li> <li>— Wait until the keypad lamp goes out (about 5 seconds) before pressing the next button.</li> </ul> </li> </ul>	Interior lamps or keyhole illumination do not turn ON Keypad lights for each button, interior lamps, keyhole illumination ON with first button pressed. None of the buttons light the keypad One or more of the buttons fail to light the keypad	PERFORM Pinpoint Test E. GO to A4. PERFORM Pinpoint Test C. PERFORM Pinpoint Test D.