

## DIAGNOSIS (Continued)

## QUICK TEST (Continued)

TEST STEP	RESULT	ACTION TO TAKE
<b>A4</b> LOCK DOORS USING KEYPAD		
<ul style="list-style-type: none"> <li>Close all doors and luggage compartment deck lid. — Make sure all doors are unlocked.</li> <li>Simultaneously press buttons 7/8 and 9/0 on the keypad.</li> </ul> <p>NOTE: This step applicable only on vehicles equipped with anti-theft.</p> <ul style="list-style-type: none"> <li>Watch the anti-theft indicator lamp located on instrument panel, while performing this step.</li> </ul>	<ul style="list-style-type: none"> <li>Anti-theft light OFF when doors closed and locked</li> <li>All doors lock, interior lamps OFF, keypad lamp OFF, and optional anti-theft indicator OFF when doors closed, ON for 30 seconds after doors lock, then OFF</li> <li>Interior lamps stay ON</li> <li>Anti-theft light ON when doors closed and unlocked</li> <li>No doors lock or keypad lamp stays ON</li> </ul>	<ul style="list-style-type: none"> <li>Perform Pinpoint Test H.</li> <li>GO to A5.</li> <li>PERFORM Pinpoint Test E.</li> <li>PERFORM Pinpoint Test H.</li> <li>REPEAT Step A4, if not OK, REPLACE module. REPEAT Quick Test.</li> </ul>
<b>A5</b> UNLOCK DRIVER DOOR USING PERMANENT CODE		
<ul style="list-style-type: none"> <li>Enter the permanent code by pressing the buttons on the keypad in the proper sequence. Use the code sequence that appears on the module. — Key OFF — Doors closed and locked</li> <li>Open driver's door</li> </ul> <p>NOTE: Ensure you press each button within five seconds of the previous depression. If keypad lamp goes off, system has timed out and you must re-enter entire code</p>	<ul style="list-style-type: none"> <li>Alarm sounds (anti-theft equipped system)</li> <li>Driver's door unlocks, interior lamps ON, alarm does not sound when door is open</li> <li>Driver's door fails to unlock or interior lamps stay OFF</li> </ul>	<ul style="list-style-type: none"> <li>REFER to Anti-Theft system (Section 01-14C) REPEAT Quick Test.</li> <li>GO to A6.</li> <li>REPEAT Step A5, if not OK, REPLACE module. REPEAT Quick Test.</li> </ul>
<b>A6</b> UNLOCK PASSENGER DOOR(S) USING BUTTON 3/4		
<ul style="list-style-type: none"> <li>If more than 5 seconds have elapsed since Step A5 (if the lamp on the keypad has gone out) re-enter the permanent code.</li> <li>Press button 3/4 on the keypad (must be done within 5 seconds of entering the permanent code).</li> <li>Do passenger doors unlock?</li> </ul>	<ul style="list-style-type: none"> <li>Yes</li> <li>No</li> </ul>	<ul style="list-style-type: none"> <li>GO to A7.</li> <li>REPEAT Step A6. If not OK, REPLACE module. REPEAT Quick Test.</li> </ul>
<b>A7</b> UNLOCK LUGGAGE COMPARTMENT DECK LID USING BUTTON 5/6		
<ul style="list-style-type: none"> <li>If more than 5 seconds have elapsed since Step A6 (if the lamp on the keypad has gone out) re-enter the permanent code.</li> <li>Press button 5/6 (must be done within 5 seconds of entering the permanent code or within five seconds of unlocking passenger doors with button 3/4).</li> </ul>	<ul style="list-style-type: none"> <li>Luggage compartment deck lid unlocks</li> <li>Luggage compartment deck lid does not unlock</li> <li>Luggage compartment lid always OPEN or in UNLOCKED position</li> </ul>	<ul style="list-style-type: none"> <li>Go to A8.</li> <li>PERFORM to Pinpoint Test G.</li> <li>PERFORM Pinpoint Test G, Step 5.</li> </ul>