

## DIAGNOSIS (Continued)

## QUICK TEST (Continued)

TEST STEP		RESULT	ACTION TO TAKE
<b>A8</b>	<b>DOORS LOCK WHEN SEATED DRIVER SHIFTS TRANSAXLE PARK / REVERSE / DRIVE</b>		
	<ul style="list-style-type: none"> <li>● Sit in the driver's seat.</li> <li>● Ensure that transaxle lever is in PARK.</li> <li>● Close driver's door.               <ul style="list-style-type: none"> <li>— All doors unlocked.</li> <li>— All doors fully closed.</li> <li>— Interior lamps off.</li> </ul> </li> <li>● Key to ON.</li> <li>● Shift the transaxle lever:               <ul style="list-style-type: none"> <li>— To REVERSE.</li> <li>— Then to DRIVE.</li> </ul> </li> <li>● Do doors lock?</li> </ul>	Yes No	GO to A9. Depress and release the brake pedal. REPEAT Test Step A8 once. If concern still exists, perform the following: <ul style="list-style-type: none"> <li>● If more than five seconds have elapsed since Step A7, RE-ENTER the permanent code</li> <li>● PRESS and HOLD button 7/8</li> <li>● PRESS and RELEASE button 3/4</li> <li>● RELEASE button 7/8.</li> </ul> If concern still exists, GO to Pinpoint Test B.
<b>A9</b>	<b>AUTOMATIC RELOCK OF ANY DOOR</b>		
	<ul style="list-style-type: none"> <li>● Still seated in driver seat.               <ul style="list-style-type: none"> <li>— Transaxle still in DRIVE.</li> <li>— Key still ON.</li> </ul> </li> <li>● Open any door.</li> <li>● Close door.</li> <li>● Does door lock?</li> </ul>	Yes No	GO to A10. PERFORM Pinpoint Test B.
<b>A10</b>	<b>DOES NOT RE-LOCK WHEN DRIVER SEAT IS NOT OCCUPIED</b>		
	<ul style="list-style-type: none"> <li>● Open driver door (seat should be empty).               <ul style="list-style-type: none"> <li>— Transaxle still in DRIVE.</li> <li>— Key still ON (engine not running).</li> </ul> </li> <li>● Close driver door.</li> <li>● Does driver door lock?</li> </ul>	No Yes	GO to A11. PERFORM Pinpoint Test B.
<b>A11</b>	<b>LIFTING DOOR HANDLE TO TURN ON ILLUMINATED ENTRY</b>		
	<ul style="list-style-type: none"> <li>● Key to OFF.</li> <li>● Transaxle in PARK.</li> <li>● Doors closed and locked.</li> <li>● Lift either front door handle to open door.</li> <li>● Within 25 seconds, unlock door with key, get inside vehicle and turn ignition ON.</li> </ul>	Interior lamps illuminated with door handle lifted and go off when ignition is turned ON Interior lamps illuminate and do not go off when ignition is turned ON Interior lamps do not illuminate	GO to A12. REPLACE module. REPEAT Quick Test. PERFORM Pinpoint Test E.
<b>A12</b>	<b>CHECK IF ALTERNATE CODE IS ACCEPTED</b>		
	NOTE: In the following, no more than 5 seconds should elapse between successive key presses. <ul style="list-style-type: none"> <li>● Key OFF</li> <li>● Enter the permanent code on the keypad.</li> <li>● Press button 1/2 (this alerts system to accept an alternate code).</li> <li>● Press (in sequence) buttons 9/0, 7/8, 5/6, 3/4 and 1/2.</li> </ul>	Keypad lamp and interior lamps go out immediately after pressing the last button Keypad lamp stays on	GO to A13. REPLACE module. REPEAT Quick Test.