

DIAGNOSIS (Continued)

QUICK TEST (Continued)

TEST STEP		RESULT	ACTION TO TAKE
A13	UNLOCK DOOR USING ALTERNATE CODE		
	<ul style="list-style-type: none"> Close and lock doors. Press (in sequence) buttons 9/0, 7/8, 5/6, 3/4 and 1/2 on the keypad. Does driver door unlock? 	Yes No	GO to A14. REPEAT A11 and A12. If still not OK, REPLACE module. REPEAT Quick Test.
A14	DISABLE ALTERNATE CODE		
	<ul style="list-style-type: none"> Starting with the keypad lamp out, enter the permanent code on the keypad. Press button 1/2 (within 5 seconds of entering the permanent code). Wait until keypad lamp goes out. — This removes the alternate code. Close and lock driver door. Press (in sequence) buttons 9/0, 7/8, 5/6, 3/4 and 1/2 on the keypad. 	Doors remain locked Some doors unlock	GO to A15. REPLACE module. REPEAT Quick Test.
A15	DO NOT ARM ANTI-THEFT SYSTEM WHILE IGNITION IS ON		
	NOTE: Perform this step only for vehicles equipped with FORD factory installed anti-theft option. <ul style="list-style-type: none"> Key ON and doors closed and unlocked. Simultaneously press buttons 7/8 and 9/0 on keypad. Anti-theft indicator lamp response: 	Lamp does not turn on after doors lock Lamp on for 30 seconds after doors lock	GO to A16. REPLACE module. REPEAT Quick Test.
A16	CHECK PROGRAM CONNECTOR		
	<ul style="list-style-type: none"> Key ON. Momentarily insert a shorting plug into program connector (J4) (located behind the glove compartment, taped to the harness). NOTE: This shorting plug connects Program A input to Program B on the module. <ul style="list-style-type: none"> Do doors lock and unlock? 	Yes No	GO to A17. PERFORM Pinpoint Test I, Step 3.
A17	LOCK DOORS USING TRANSMITTER		
	<ul style="list-style-type: none"> Remove shorting plug from program connector (J4). Key OFF. Close all doors, doors should be unlocked. Press the LOCK button on transmitter that has been programmed into the module. NOTE: May have to press the button more than once. NOTE: For vehicles equipped with anti-theft option, watch the anti-theft indicator lamp, located on the instrument panel while performing this step.	All doors lock; interior lamps OFF; anti-theft indicator lamp OFF when doors closed, then ON for 30 seconds after doors lock No response from the door locks (even after 3 button pushes) Anti-theft does not respond correctly	GO to A18. PERFORM Pinpoint Test I, Step 1. Perform Pinpoint Test H.