

## DIAGNOSIS (Continued)

DIAGNOSIS (Continued)

## QUICK TEST (Continued)

TEST STEP		RESULT	ACTION TO TAKE
A18	UNLOCK DRIVER'S DOOR USING TRANSMITTER		
	<ul style="list-style-type: none"> <li>● Key OFF.</li> <li>● Program connector (J4) NOT shorted.</li> <li>● Doors closed and locked.</li> <li>● Press the UNLOCK button on transmitter.</li> <li>● For vehicles with anti-theft option:               <ul style="list-style-type: none"> <li>— Open driver door</li> </ul> </li> </ul>	Driver's door unlocks; interior lamps turn on; alarm does not sound when door is opened	▶ GO to A19.
		Driver's door fails to unlock or interior lamps do not turn on	▶ REPLACE module. REPEAT Quick Test.
		Alarm sounds	▶ REFER to anti-theft system (Section 01-14C). REPEAT Quick Test.
A19	UNLOCK PASSENGER DOOR(S) USING TRANSMITTER		
	<ul style="list-style-type: none"> <li>● Press the UNLOCK button on transmitter twice (the second press must be within 5 seconds of the first) or if less than 5 seconds since Step A18, press the UNLOCK button on transmitter once.               <ul style="list-style-type: none"> <li>— Key OFF.</li> <li>— Program connector (J4) NOT shorted.</li> </ul> </li> <li>● Do door(s) unlock?</li> </ul>	Yes	▶ GO to A20.
		No	▶ REPLACE module. REPEAT Quick Test.
A20	UNLOCK LUGGAGE COMPARTMENT USING TRANSMITTER		
	<ul style="list-style-type: none"> <li>● Press the (BL) TRUNK button on transmitter.               <ul style="list-style-type: none"> <li>— Key OFF.</li> <li>— Program connector (J4) NOT SHORTED.</li> </ul> </li> <li>● Does luggage compartment open?</li> </ul>	Yes	▶ GO to A21.
		No	▶ REPLACE module. REPEAT Quick Test.
A21	ACTIVATE THE PANIC ALARM USING TRANSMITTER		
	<ul style="list-style-type: none"> <li>● Press the (R) PANIC button transmitter.               <ul style="list-style-type: none"> <li>— Key OFF.</li> <li>— Program connector (J4) NOT shorted.</li> </ul> </li> <li>● Does horn sound and parklamps flash ON and OFF continuously?</li> </ul>	Yes	▶ GO to A22.
		No	▶ PERFORM Pinpoint Test J.
A22	ENSURE PANIC ALARM DOES NOT SHUT OFF WITH DIFFERENT TRANSMITTER		
	<p>NOTE: If only one transmitter is available, OMIT this step.</p> <ul style="list-style-type: none"> <li>● If more than 3 minutes has elapsed since Step A21 (if the panic alarm has shut off) repeat Step A21.               <ul style="list-style-type: none"> <li>— Key OFF.</li> <li>— Program connector (J4) NOT shorted.</li> </ul> </li> <li>● If more than one transmitter is available, press the (R) PANIC button on a different transmitter than was used in step A21.</li> <li>● Do horn and parklamps shut OFF?</li> </ul>	No	▶ GO to A23.
		Yes	▶ REPLACE module. REPEAT Quick Test.
A23	DEACTIVATE PANIC ALARM USING SAME TRANSMITTER		
	<ul style="list-style-type: none"> <li>● If more than 3 minutes has elapsed since Step A21 (if the panic alarm has shut off), repeat Step A21.               <ul style="list-style-type: none"> <li>— Key OFF.</li> <li>— Program connector (J4) NOT shorted.</li> </ul> </li> <li>● Push the (R) PANIC button on the same transmitter that was used in Step A21.</li> <li>● Do horn and parklamps shut OFF?</li> </ul>	Yes	▶ GO to A24.
		No	▶ REPLACE module. REPEAT Quick Test.
A24	TURN OFF PANIC ALARM WITH IGNITION ON		
	<ul style="list-style-type: none"> <li>● Press the (R) PANIC button on any transmitter which has been programmed into the module.               <ul style="list-style-type: none"> <li>— Program connector (J4) NOT shorted</li> </ul> </li> <li>● Then turn the ignition switch ON.</li> <li>● Do horn and parklamp shut OFF with ignition ON?</li> </ul>	Yes	▶ GO to A25.
		No	▶ REPLACE module. REPEAT Quick Test