

DIAGNOSIS (Continued)

PINPOINT TEST I
PANIC ALARM (Continued)

TEST STEP		RESULT	ACTION TO TAKE
I3	CHECK PARKLAMP INPUT CIRCUIT CONTINUITY		
	<ul style="list-style-type: none"> Disconnect module connector (J1). Test for continuity between Pin 13 of connector (J1) and Circuit 517. Is there continuity? 	Yes No	GO to I4. SERVICE Circuit 517. REPEAT Quick Test.
I4	CHECK INPUT CIRCUIT BREAKER		
	<ul style="list-style-type: none"> Measure the voltage between Pin 13 of connector (J1) and ground (module connector (J1) disconnected). Is voltage greater than 10 volts? 	Yes No	REPLACE module. REPEAT Quick Test. SERVICE open or short in Circuit 517. REPEAT Quick Test.
I5	CHECK PARKLAMPS AND AUTO LAMP RELAY		
	<ul style="list-style-type: none"> Check the parklamps and auto lamp relay — Refer to Group 17. Do parklamps and auto lamp relay check OK? 	Yes No	GO to I6. REPLACE or SERVICE the parklamp or auto lamp relay. REPEAT Quick Test.
I6	CHECK OUTPUT CIRCUIT BREAKER		
	<ul style="list-style-type: none"> Examine fuse 4. Is fuse OK? 	Yes No	SERVICE open or short in Circuit 14. REPEAT Quick Test. REPLACE circuit breaker. REPEAT Quick Test.
I7	CHECK FOR DAMAGED / WORN MODULE		
	<ul style="list-style-type: none"> Disconnect module connector (J1). Do the parklamps shut off? 	Yes No	REPLACE module. REPEAT Quick Test. GO to I8.
I8	CHECK LAMP SWITCH ON INSTRUMENT PANEL		
	<ul style="list-style-type: none"> Disconnect the lamp switch and module connector (J1). Do the parklamps shut off? 	Yes No	REPLACE the lamp switch. REPEAT Quick Test. SERVICE short to battery in Circuit 14 or SERVICE the auto lamp relay circuitry (Section 17-01). REPEAT Quick Test.
I9	ACTIVATE HORN WITH SWITCH		
	<ul style="list-style-type: none"> Press the horn switch located on the steering wheel. 	Horn sounds Horn does not sound Horn always on	GO to I10. GO to I11. GO to I13.
I10	CHECK HORN CIRCUIT CONTINUITY		
	<ul style="list-style-type: none"> Disconnect module connector (J1). Test for continuity between Pin 26 of connector (J1) and Circuit 6 (the horn relay). Is there continuity? 	Yes No	REPLACE module. REPEAT Quick Test. SERVICE Circuit 6. REPEAT Quick Test.
I11	CHECK HORN AND HORN RELAY		
	<ul style="list-style-type: none"> Check the horn and horn relay. — Refer to Section 13-06. Does horn and horn relay work? 	Yes No	GO to I12. REPLACE or SERVICE the horn or horn relay. REPEAT Quick Test.