


DESCRIPTION AND OPERATION (Continued)

While in the interval wiper mode it is normal to hear a slight ticking sound. This sound is due to the interval wiper module.

NOTE: When using interval wipers, the first wipe may not occur until after a pause of up to 12 seconds.

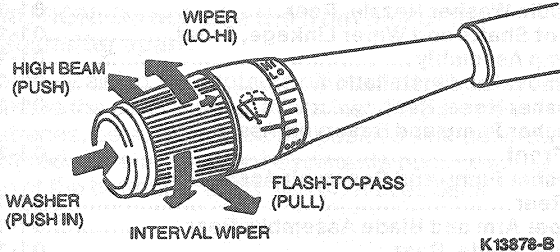

To operate the washer, push the knob of the lever toward center of steering column.

If wiper control switch is in OFF or INT position, wipers will run as long as knob is pushed in. When knob is released, the washers will stop immediately, but the wipers will run for three to four cycles, then return to previously set operation.

If the wiper control switch is in LO or HI position, washers operate with no change in wiper operation.

Wiper System and Switch, Rear

Main components of the system are a single motor assembly mounted on the liftgate, and an instrument panel-mounted control switch powered through an in-line circuit breaker.