


REMOVAL AND INSTALLATION (Continued)

4. Disconnect linkage drive arm from motor crank pin after removing clip.

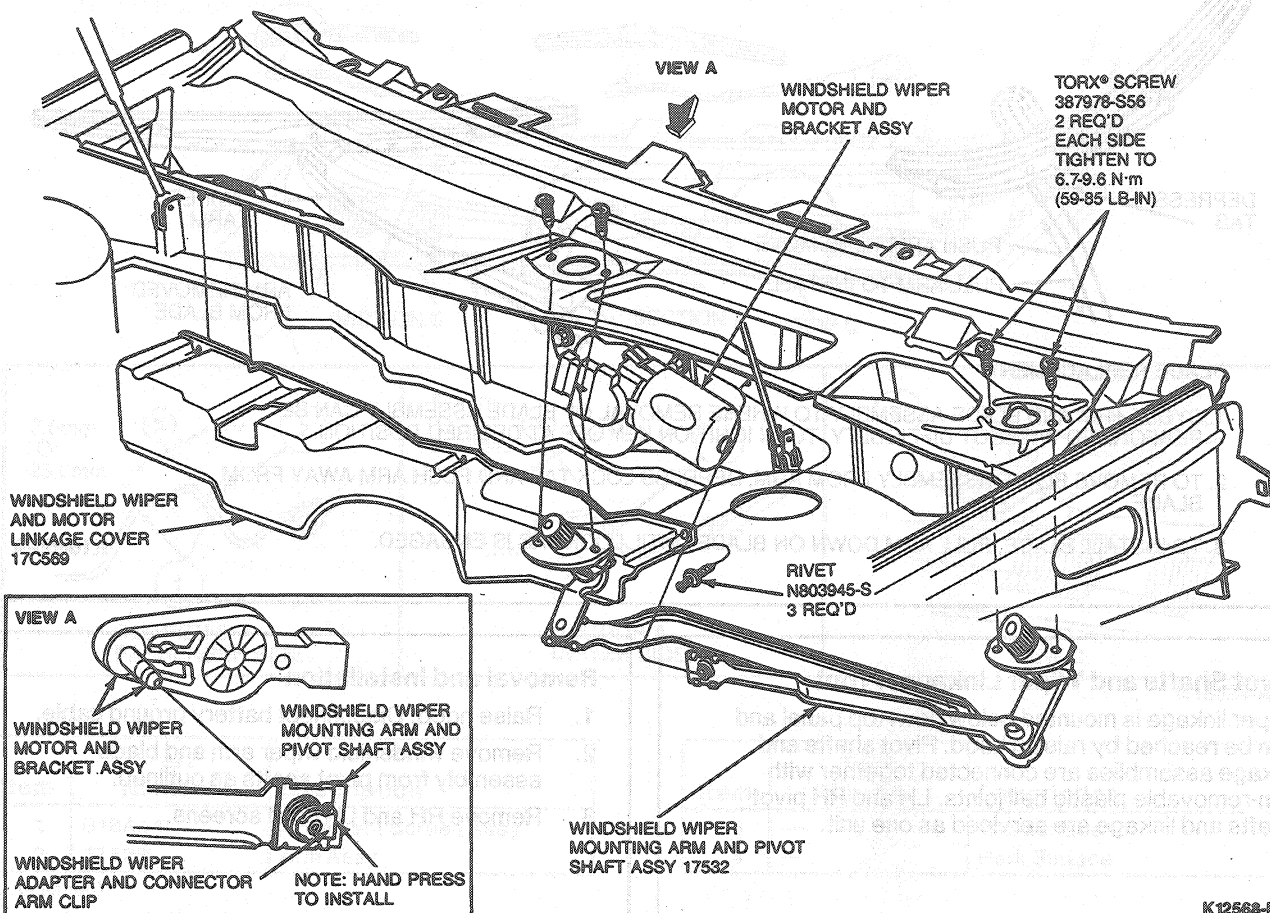

5. Remove screws retaining pivot assemblies to cowl. Remove linkage and pivots from cowl chamber.
6. To install, reverse Removal procedure. Tighten screws to 6.7-9.6 N·m (59-85 lb-in)

Wiper Arm and Blade Assembly, Rear

Removal and Installation

NOTE: To prevent glass and / or paint damage, do not pry arm from pivot with metal or sharp tool.

Raise arm away from glass and insert a 1.6mm (0.062-inch) pin in holes in retainer arm. Allow arm to move toward glass to relieve arm spring tension and lift arm off pivot shaft.

To install, push main arm head over pivot shaft. Ensure pivot shaft is in park, and that blade assembly dimension is positioned correctly. Hold main arm head on pivot shaft while raising blade end of wiper arm and remove 1.6mm (0.062-inch) pin. Then, lower blade to glass.

Wiper Blade, Rear

Removal and Installation

To remove blade, press down on arm to unlatch top stud and pull blade from arm.

To install blade, slide blade assembly onto arm. Ensure that top stud and bottom saddle are securely latched.

