


REMOVAL AND INSTALLATION (Continued)

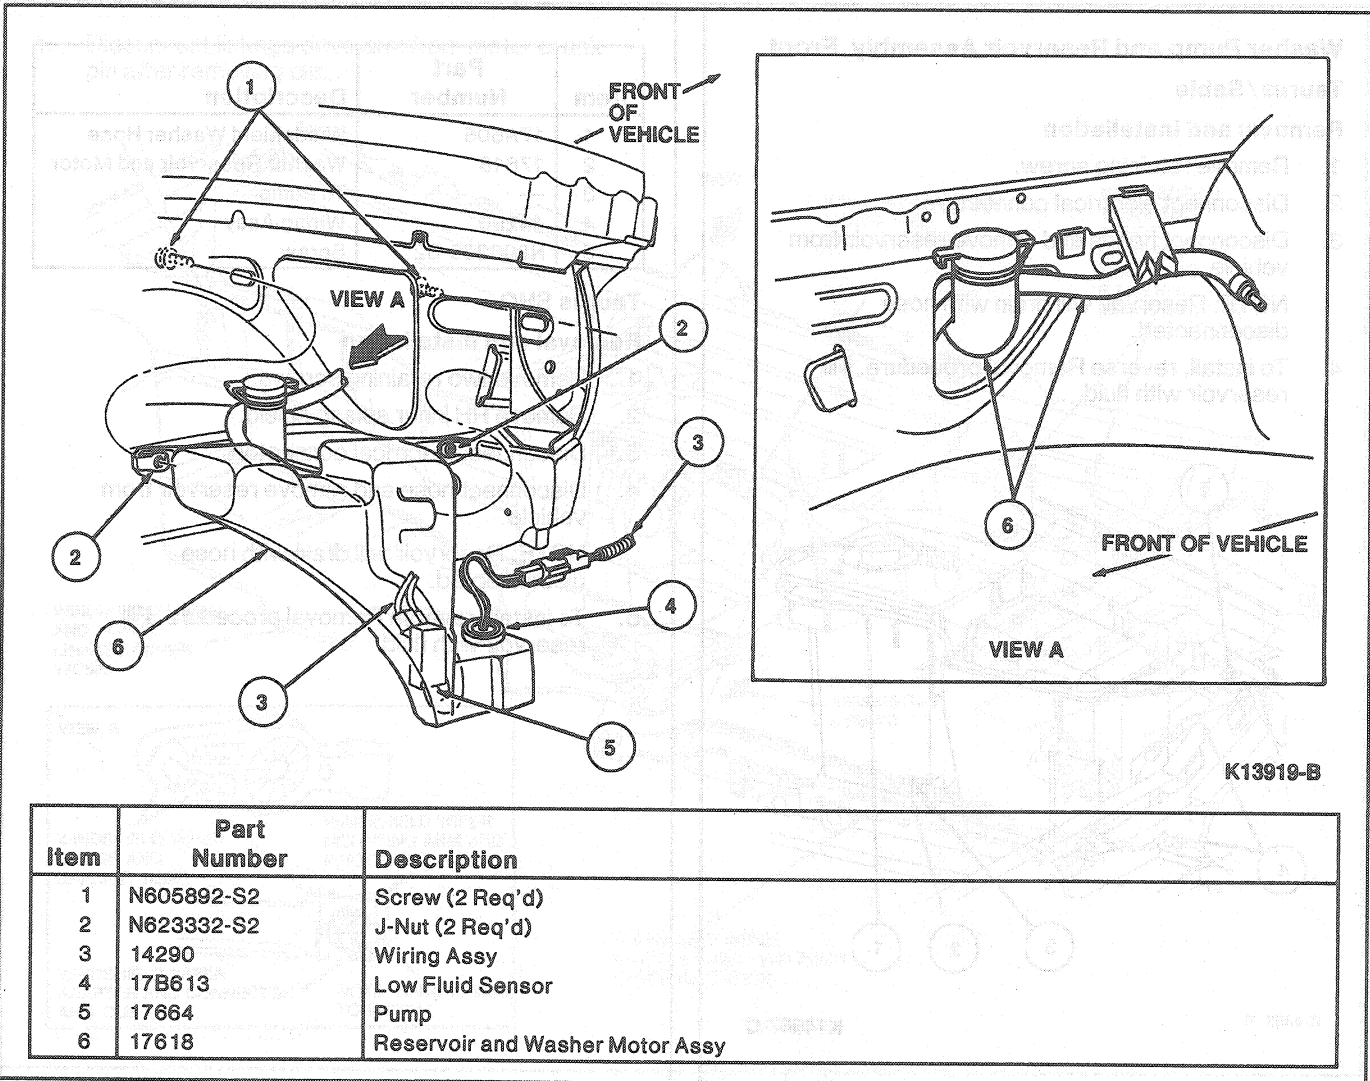

Item	Part Number	Description
1	N605892-S2	Screw (2 Req'd)
2	N623332-S2	J-Nut (2 Req'd)
3	14290	Wiring Assy
4	17B613	Low Fluid Sensor
5	17664	Pump
6	17618	Reservoir and Washer Motor Assy

Pump Assembly**Removal**

1. Remove reservoir assembly from vehicle. Disconnect electrical connector and hoses.
2. Using a small-blade screwdriver, pry out pump being careful not to damage plastic housing.
3. Remove one-piece seal / filter and inspect for damage or debris.

Installation

1. Insert seal.
2. Lubricate inside diameter of seal with soapy solution and insert pump into bottle pump cavity until it is firmly seated in seal.
3. Connect electrical plugs and hoses and replace reservoir assembly in vehicle.
4. Fill reservoir slowly (otherwise air will be trapped in reservoir causing it to overflow) and operate washer system.

5. Check for leaks.

CAUTION: Do not operate pump until fluid is added to reservoir.

Washer Hose, Rear**Removal and Installation**

1. Remove D-pillar trim panel and remove washer hose.
2. Pull hose from nozzle.
3. Pull grommet from door and roof.
4. To install, reverse Removal procedure.