
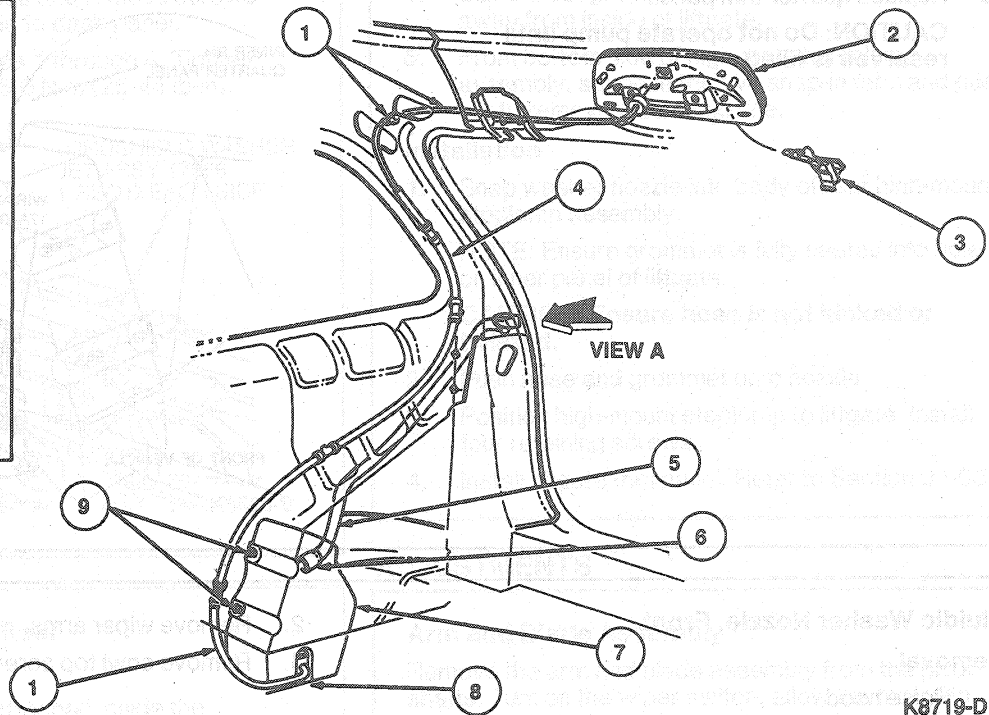


REMOVAL AND INSTALLATION (Continued)

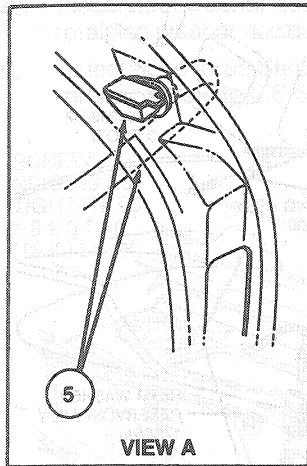

Item	Part Number	Description
1	17408	Hose Assy
2	13A613	High-Mount Stoplamp
3	17603	Washer Jet Assy
4	17408	Hose Assy

(Continued)

Item	Part Number	Description
5	17632	Reservoir Fill and Cap Assy
6	8287	Clamp
7	17618	Washer Reservoir
8	17664	Pump
9	N800369-S2	Screw (3 Req'd)

Washer Pump and Reservoir Assembly, Rear**Removal**

1. Remove RH quarter trim panel. Refer to Section 01-05.
2. Disconnect electrical connector reservoir supply hose, and washer nozzle hose as outlined.
3. Remove reservoir retaining screws and remove reservoir from vehicle.
4. Using a small-blade screwdriver, pry out pump carefully, so as not to damage the plastic housing. Remove one piece seal/filter and inspect for damage or foreign material.

5. Flush reservoir and clean any foreign material from motor cavity or the reservoir.

Installation

1. Insert seal.
2. Lubricate inside of seal with soapy solution and insert pump into bottle pump cavity until it is firmly seated in the seal.
3. Connect electrical connector and supply hose.
4. Install reservoir. Install retaining screws.
5. Fill reservoir slowly, otherwise air will become trapped in reservoir causing it to overflow.