


REMOVAL AND INSTALLATION (Continued)

4. Disconnect washer hose and remove screws retaining washer nozzle to dash panel.
5. To install, reverse Steps 1 through 4. Tighten retainer screw to 2.8-5.0 N·m (25-44 lb-in).

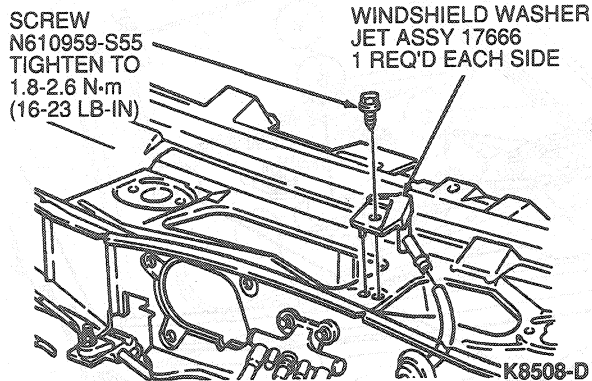

4. Disconnect grommet hose from nozzle by pulling away from inside of liftgate.
5. From bottom side of high-mount stoplamp assembly, squeeze the two snap-in tabs and push out to remove washer nozzle.

Installation

1. Snap washer nozzle into body of rear high-mount stoplamp assembly.

NOTE: Ensure grommet is fully seated into hole on inner panel of liftgate.

CAUTION: Ensure hose is not kinked or twisted.

2. Push hose and grommet onto nozzle.
3. Position high-mount stoplamp to liftgate. Install four retaining screws.
4. Install liftgate trim panel. Refer to Section 01-05.

ADJUSTMENTS

Fluidic Washer Nozzle, Rear

Removal

1. The liftgate nozzle is attached inside the high-mount stoplamp by two snap-in tabs.
2. Remove liftgate trim panel. Refer to Section 01-05.
3. Remove four nuts retaining high-mount stoplamp. Refer to Section 17-01.

Arm and Blade Assembly

Remove the arm and blade assembly from the pivot shafts. Turn on the wiper switch, allow the motor to move the pivot shafts three or four cycles, and then turn off the wiper switch. This will place the pivot shafts in PARK position.