


REMOVAL AND INSTALLATION (Continued)

4. Remove roof side inner rear moulding on driver's or passenger's side.
5. Remove bolt in sling assembly.
6. Remove quarter trim panel.
7. Remove safety belt anchor plate-to-sill bolt.
8. Remove safety belt through slot near sill.
9. Snap out bezel in quarter trim panel.
10. Remove safety belt assembly through bezel opening.

11. Remove safety belt retractor bolt.
12. Remove outboard safety belt assembly from vehicle.
13. Repeat procedure on opposite side.
14. To install, reverse Removal procedure. Cycle retractor to check for proper operation. Ensure safety belt is not twisted.

NOTE: Be sure to tighten all retaining bolts to 30-40 N·m (23-29 lb-ft).

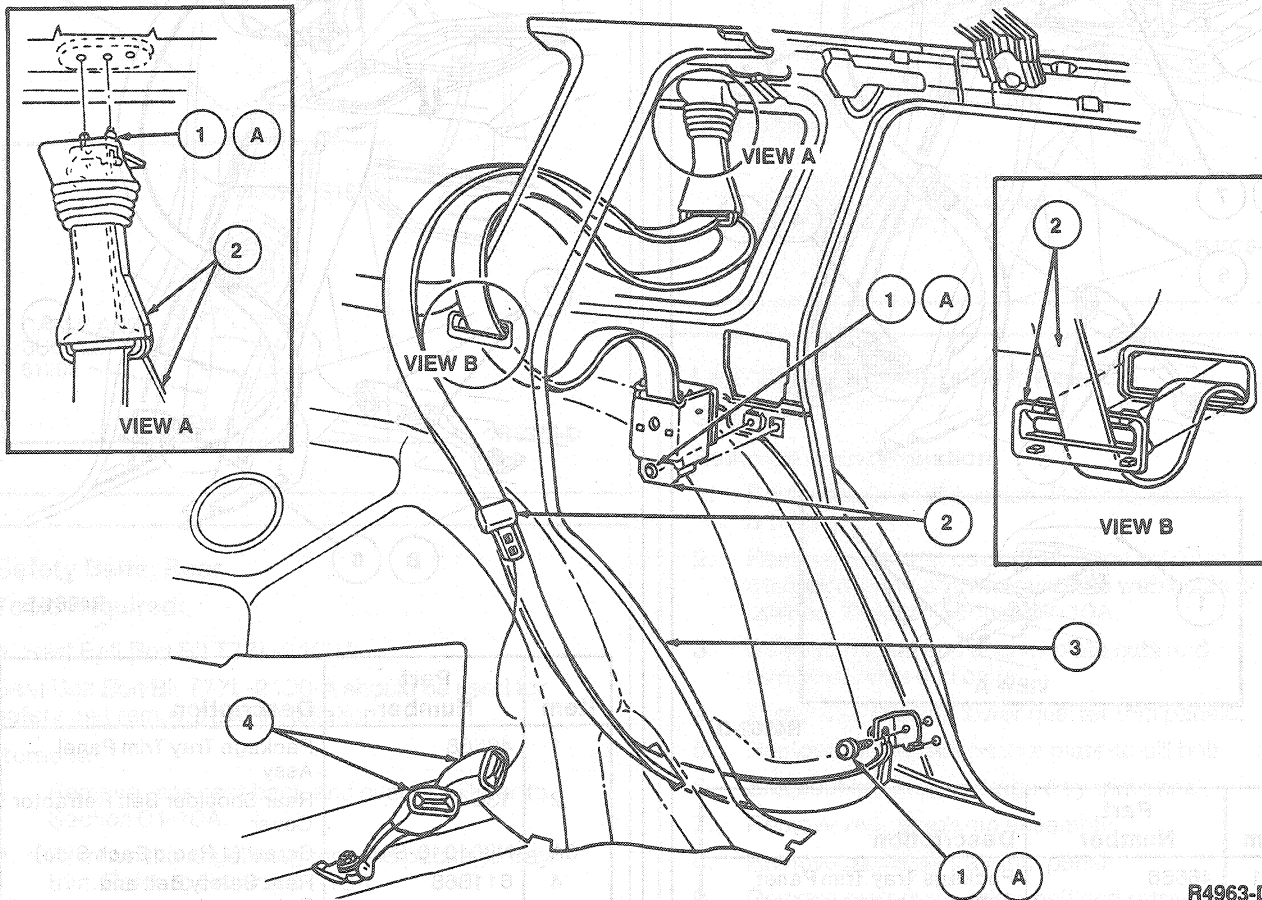

Item	Part Number	Description
1A	389370-S 100	Bolt
2	11B68	Rear Safety Belt and Retractor Assy
3	27790	Quarter Trim Panel Assy
4	60044	Rear Safety Belt Cable and Buckle Assy
A		Tighten to 30-40 N·m (23-29 Lb-Ft)