

SECTION 01-20B Restraints, Passive—Supplemental Air Bag System

SUBJECT	PAGE	SUBJECT	PAGE
DESCRIPTION		DIAGNOSIS AND TESTING (Cont'd.)	
Diagnostic Monitor	01-20B-4	Glossary.....	01-20B-13
Features and Functions.....	01-20B-4	Location of Air Bag System	
Driver Air Bag	01-20B-2	Components	01-20B-13
Electrical System	01-20B-6	Electrical Schematic— Air Bag	
Passenger Air Bag Assembly	01-20B-3	System	01-20B-14
Passenger Air Bag Delete Bracket	01-20B-4	No Air Bag Indicator.....	01-20B-17
Passenger Air Bag, Optional	01-20B-3	Rapid Continuous Flashing of Air Bag	
Steering Column Wheel and Clockspring	01-20B-6	Indicator	01-20B-64
DIAGNOSIS AND TESTING		DISPOSAL PROCEDURES	
Air Bag System Reconnect Check List.....	01-20B-13	Air Bag Disposal	01-20B-71
Continuous Air Bag Indicator	01-20B-19	Deployed Air Bag.....	01-20B-70
Diagnosing Customer Concerns With Hard		Scrapped Vehicle	01-20B-71
Diagnostic Trouble Codes	01-20B-12	Undeployed Air Bag— Faulty	01-20B-70
Diagnosing Customer Concerns Without Hard		PARTS REPLACEMENT	
Diagnostic Trouble Codes	01-20B-12	Air Bag Modules.....	01-20B-9
Diagnostic Trouble Code 12.....	01-20B-20	Air Bag System	01-20B-10
Diagnostic Trouble Code 13.....	01-20B-23	Service of Air Bag Equipped Vehicles Involved	
Diagnostic Trouble Code 14.....	01-20B-27	In Collisions	01-20B-10
Diagnostic Trouble Code 21.....	01-20B-29	REMOVAL AND INSTALLATION	
Diagnostic Trouble Code 22.....	01-20B-31	Clockspring.....	01-20B-69
Diagnostic Trouble Code 23.....	01-20B-34	Diagnostic Monitor	01-20B-67
Diagnostic Trouble Code 24.....	01-20B-36	Module, Driver Air Bag	01-20B-67
Diagnostic Trouble Code 32.....	01-20B-39	Module, Passenger Air Bag	01-20B-68
Diagnostic Trouble Code 33.....	01-20B-42	Sensor, Center Cowl Crash	01-20B-66
Diagnostic Trouble Code 34.....	01-20B-44	Sensor, LH Kick Panel Safing	01-20B-66
Diagnostic Trouble Code 35.....	01-20B-47	Sensor— Center Radiator	01-20B-65
Diagnostic Trouble Code 41.....	01-20B-49	SERVICE PRECAUTIONS	
Diagnostic Trouble Code 42.....	01-20B-51	Deployed Air Bags	01-20B-11
Diagnostic Trouble Code 44.....	01-20B-53	General Instructions	01-20B-11
Diagnostic Trouble Code 45.....	01-20B-55	Live Air Bags	01-20B-11
Diagnostic Trouble Code 51.....	01-20B-57	SPECIAL SERVICE TOOLS	01-20B-72
Diagnostic Trouble Code 52.....	01-20B-60	SPECIFICATIONS	01-20B-72
Diagnostic Trouble Code 53.....	01-20B-62	VEHICLE APPLICATION	01-20B-1

VEHICLE APPLICATION

Taurus/Sable.

DESCRIPTION

The Supplemental Air Bag Restraint System is designed to provide increased collision protection for the driver **IN ADDITION TO** that provided by the driver three point safety belt system. Safety belt use is necessary to obtain the best occupant protection and to receive the full advantages of the supplemental air bag. **FORD RECOMMENDS THE USE OF SAFETY BELT SYSTEMS FOR ALL VEHICLE OCCUPANTS.**

Refer to Section 01-20A for information on the Safety Belt Restraint system.

The Supplemental Air Bag Restraint System consists of two basic subsystems: