


DIAGNOSIS AND TESTING (Continued)

(Continued)

Electrical Schematic—Diagnostic Trouble Code 34

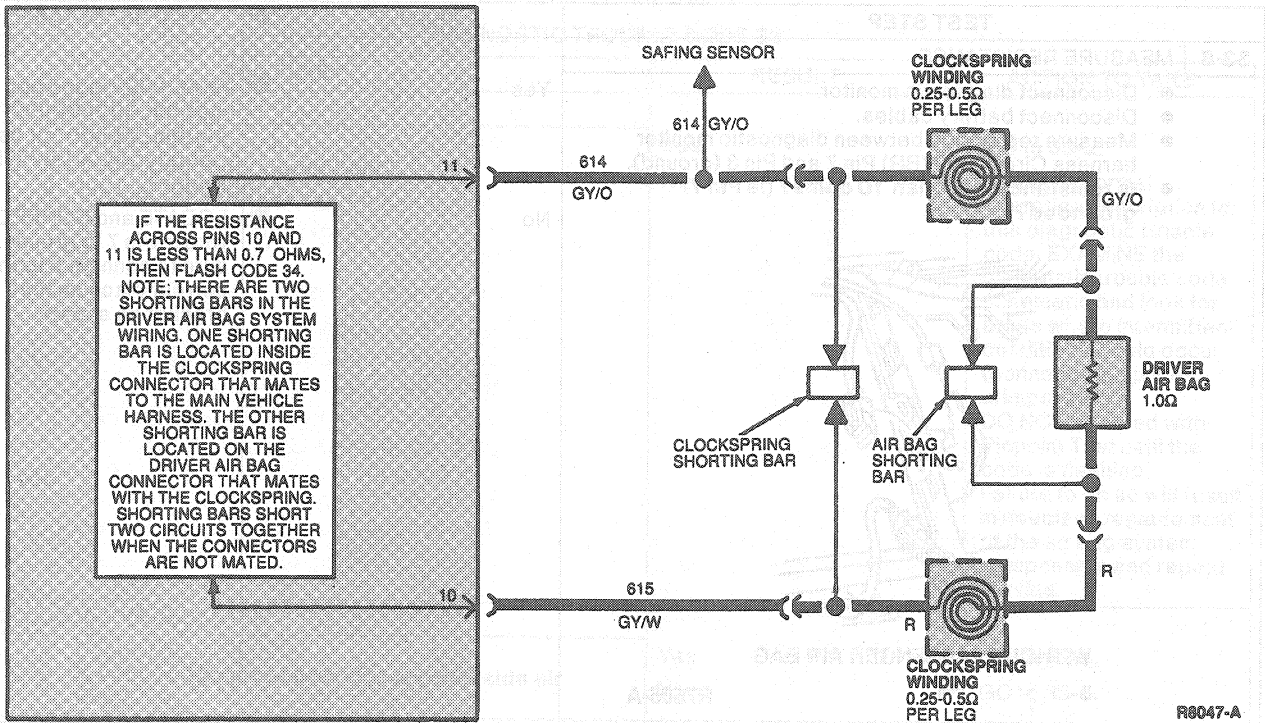

Pinpoint Tests—Diagnostic Trouble Code 34

DIAGNOSTIC TROUBLE CODE 34

TEST STEP	RESULT	ACTION TO TAKE
<p>34-1 VERIFY CONDITION</p> <ul style="list-style-type: none"> ● Turn key to ON. ● Count diagnostic trouble code. ● Is code 34 flashing? 	<p>Yes</p> <p>No</p>	<p>▶ GO to 34-2.</p> <p>▶ Read the normal operation description for this diagnostic trouble code. EXAMINE the diagnostic trouble code schematic and look for areas where intermittent conditions would occur (connectors, splices, crimps, etc.). DO NOT proceed with Pinpoint Test until the code is flashing! Failure to do so will result in needless replacement of the air bag system components and repeat service.</p>