


REMOVAL AND INSTALLATION (Continued)

Diagnostic Monitor

Removal

WARNING: THE ELECTRICAL CIRCUIT NECESSARY FOR SYSTEM DEPLOYMENT IS POWERED DIRECTLY FROM THE BATTERY. TO AVOID ACCIDENTAL DEPLOYMENT AND POSSIBLE PERSONAL INJURY, THE BATTERY POSITIVE CABLE MUST BE DISCONNECTED PRIOR TO SERVICING OR REPLACING ANY SYSTEM COMPONENTS.

1. Disconnect battery positive cable.
2. Rotate glove compartment past its stops.
3. Depress two diagnostic monitor retaining tabs and slide monitor off its bracket.
4. Disconnect two monitor connectors. Remove monitor.

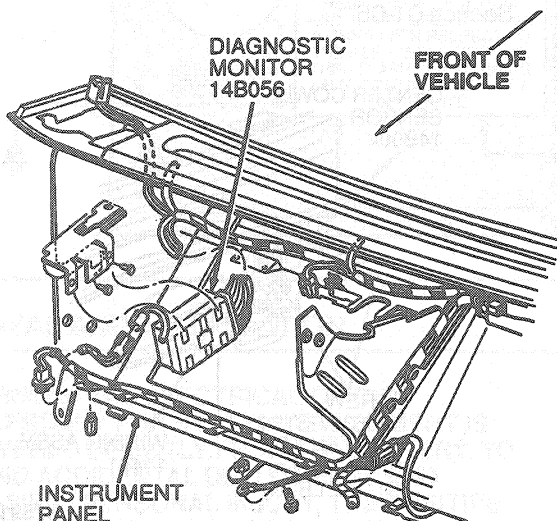

R6767-C

Installation

1. Connect diagnostic monitor connectors.
2. Position monitor to bracket and slide into place. Ensure retaining tabs are secure.
3. Connect positive battery cable.
4. Return glove compartment to its original position.

5. Verify air bag.

Module, Driver Air Bag



NOTE: If the air bag did not deploy in a collision, it may not have been needed. Complete all diagnosis before replacing the air bag module.

NOTE: Fill out and return air bag traceability postcard for new air bag with VIN numbers, note diagnostic trouble code.

Removal

WARNING: THE ELECTRICAL CIRCUIT NECESSARY FOR SYSTEM DEPLOYMENT IS POWERED DIRECTLY FROM THE BATTERY. TO AVOID ACCIDENTAL DEPLOYMENT AND POSSIBLE PERSONAL INJURY, THE BATTERY CABLE MUST BE DISCONNECTED PRIOR TO SERVICING OR REPLACING ANY SYSTEM COMPONENTS.

1. Disconnect battery positive cable.
2. Remove four nut and washer assemblies retaining air bag module to steering wheel.

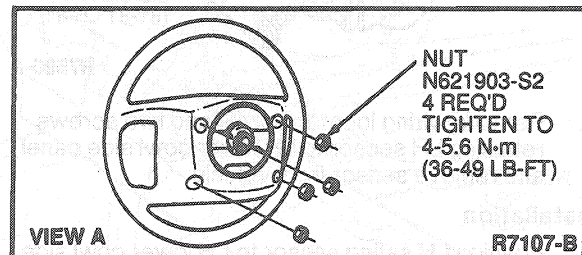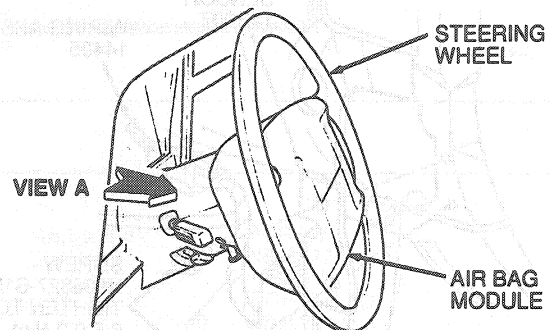

R7107-B