

SECTION 02-03 Engine and Transaxle Mounting


| SUBJECT | PAGE | SUBJECT | PAGE |
|--------------------------------------|---------|------------------------------------|---------|
| REMOVAL AND INSTALLATION | | SPECIAL SERVICE TOOLS | 02-03-9 |
| Engine Mounts, 3.0L EFI Engine | 02-03-4 | SPECIFICATIONS | 02-03-8 |
| Engine Mounts, 3.0L SHO Engine | 02-03-1 | VEHICLE APPLICATION | 02-03-1 |
| Engine Mounts, 3.8L EFI Engine | 02-03-6 | | |

VEHICLE APPLICATION

Taurus/Sable.

REMOVAL AND INSTALLATION

Engine Mounts, 3.0L SHO Engine

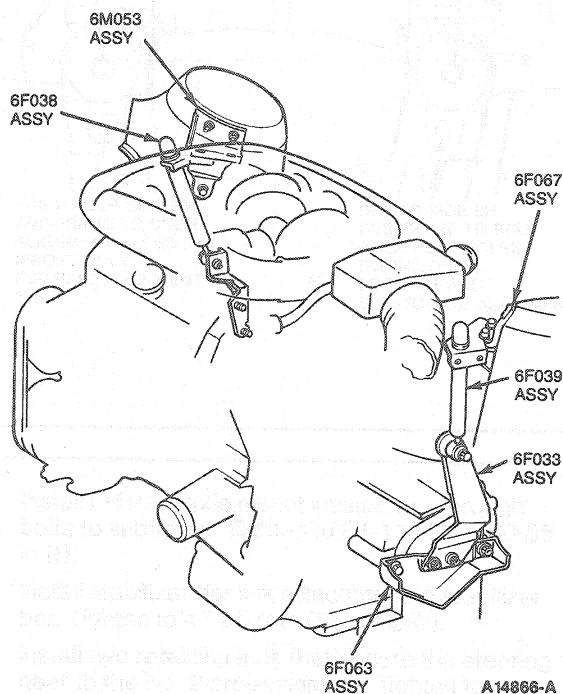

2. Raise vehicle on hoist. Refer to Section 00-02.
3. Place jack and wood block in suitable place under engine.
4. Remove roll damper to engine mount retaining bolts and remove roll damper.
5. Raise engine with jack (enough to unload insulator).

Insulator, RH Front, No. 2 and/or RH Rear, No. 3

Removal

1. Remove lower damper retaining bolt from RH side of engine.