


REMOVAL AND INSTALLATION (Continued)

Engine Mounts, 3.0L EFI Engine

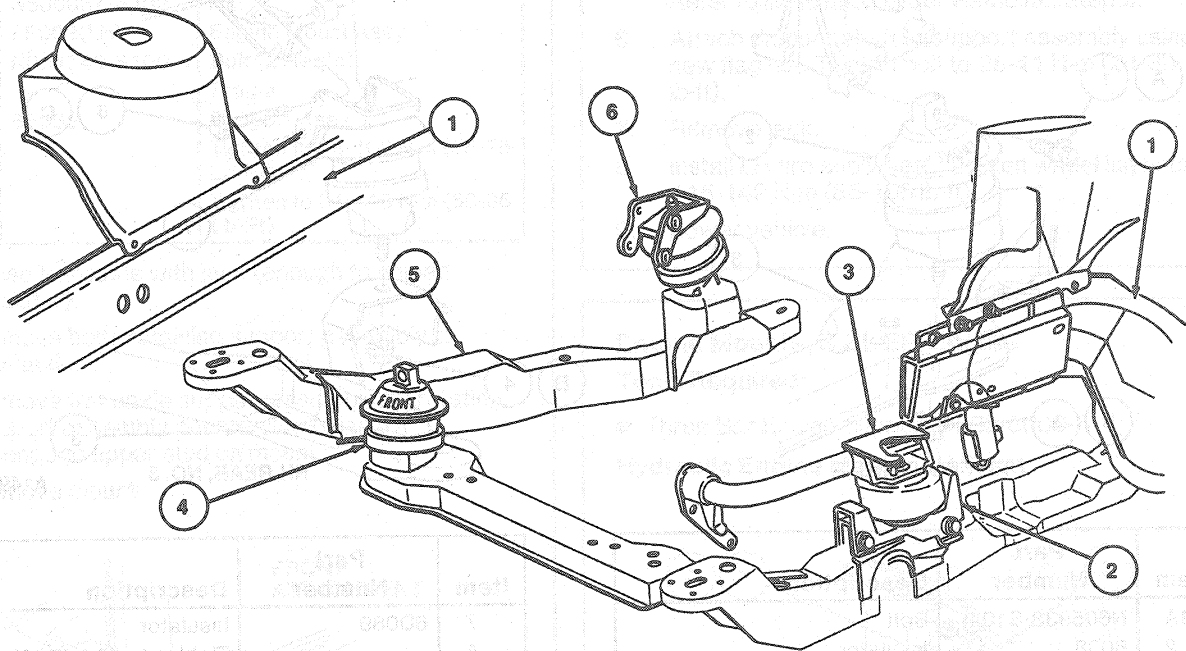

A9703-F

Item	Part Number	Description
1	—	Side Member
2	6F063	Insulator No. 1A
3	6F065	Support Assy
4	6038	No. 2 Insulator
5	—	Frame
6	6068	No. 3 Insulator

Insulator, RH Front, No. 2 and/or RH Rear, No. 3

Removal

1. Raise vehicle on hoist. Refer to Section 00-02.
2. Place jack and wood block in suitable place under engine block.
3. Remove nuts retaining RH front and RH rear insulators to frame.

4. Raise engine with jack (enough to unload insulator).
5. Remove two bolts from No. 3 insulator and one bolt from No. 2 insulator and remove insulator from engine bracket.