


IN-VEHICLE SERVICE (Continued)

10. Disconnect electrical connections to the cold start injector (CSI) (9F880) (FF only), intake air temperature (IAT) sensor (12A697) (unleaded gasoline only), idle air control (IAC) sensor (9F715), PFE or DPFE sensor (depending on application) and throttle position (TP) sensors (9B989).
 11. Remove generator brace retaining nuts from generator bracket and throttle body stud. Remove brace.
- WARNING: COVER VALVE WITH SHOP CLOTH TO PREVENT ACCIDENTAL FUEL SPRAY INTO EYES.**
12. On FF only, remove fuel supply inlet and outlet hoses to cold start injector as outlined in Section 03-04A.

Unleaded Gasoline Shown, FF Similar

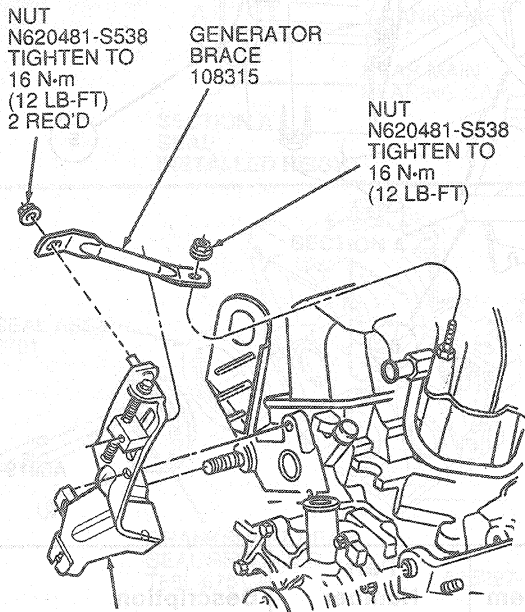


NUT
N620481-S538
TIGHTEN TO
16 N-m
(12 LB-FT)
2 REQ'D

GENERATOR
BRACE
108315

GENERATOR BELT
ADJUSTING ARM
ASSY 10C336

A8820-E

Unleaded Gasoline Only

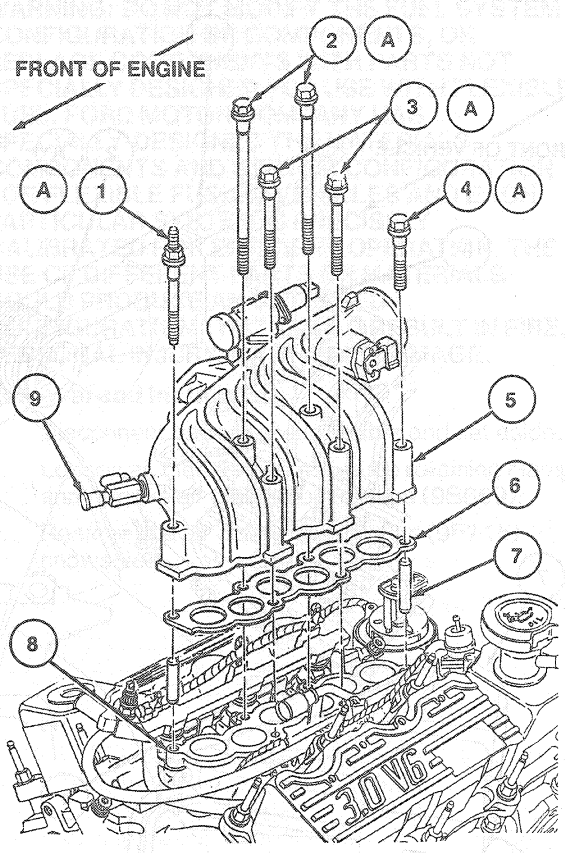

V7667-A

Item	Part Number	Description
1A	—	Stud Bolt
2A	—	Bolt M8 x 1.25 x 130 (2 Req'd)
3A	—	Bolt M8 x 1.25 x 100 (2 Req'd)
4A	—	Bolt M8 x 1.25 x 68
5	9E926	Throttle Body
6	9H486	Intake Manifold Upper Gasket
7	—	Guide Pin (2 Req'd)
8	9424	Intake Manifold
9	9A474	Intake Manifold Vacuum Outlet Fitting and Cap
A	—	Tighten to 20-30 N-m (15-22 Lb-Ft)