


IN-VEHICLE SERVICE (Continued)

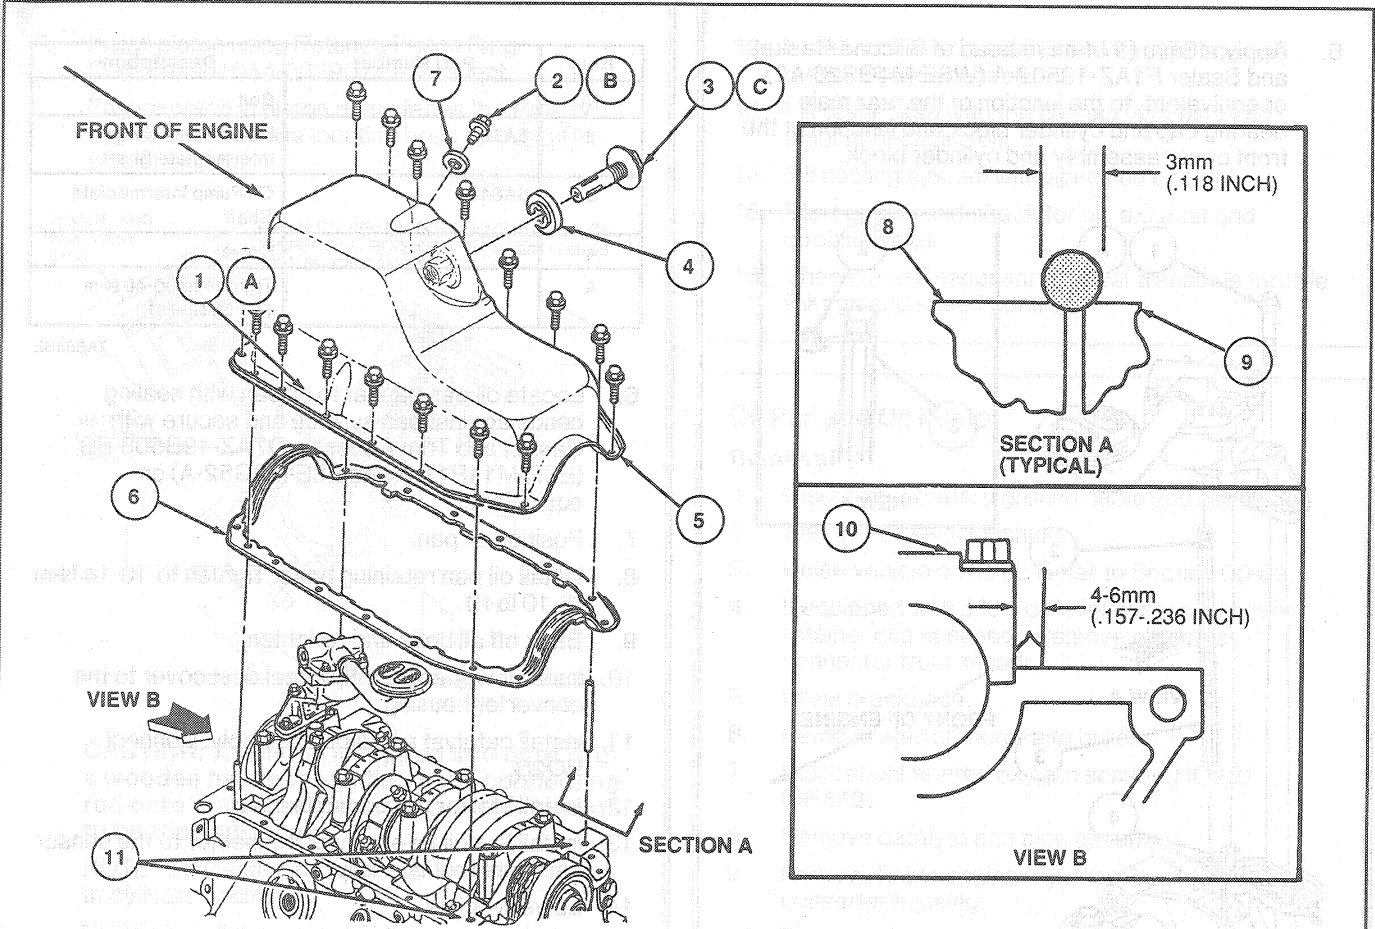

A8599-G

Item	Part Number	Description
1A	—	Screw and Washer Assy (16 Req'd)
2B	6675	Drain Plug Assy
3C	6675	Oil Level Sensor
4	6C626	Oil Level Sensor Gasket
5	6675	Oil Pan Assy
6	6710	Oil Pan Gasket
7	6734	Drain Plug Gasket
8	6010	Cylinder Block Assy

(Continued)

Item	Part Number	Description
9	6019	Front Cover Assy
10	6A325	Rear Main Bearing Cap
11	F1AZ-19562-A	Silicone Sealer (4 Places)
A		Tighten to 10-14 N·m (8-10 Lb-Ft)
B		Tighten to 11-16 N·m (9-12 Lb-Ft)
C		Tighten to 27-41 N·m (20-30 Lb-Ft)

TA8599G

Sensors

Removal

Unless otherwise noted, all sensors are removed by disconnecting wiring connector and unscrewing sensor. Refer to Section 18-01 for electrical connector disengagement.