

IN-VEHICLE SERVICE (Continued)

Intake Air Temperature (IAT) Sensor

Unleaded Gasoline Only

Located in the throttle body. When installing, tighten to 20 N·m (15 lb-ft).


VACUUM FITTING ASSY 9A474
TIGHTEN TO 10 N·m (7 LB-FT) THEN
ADVANCE CLOCKWISE TO POSITION
SHOWN IN VIEW A (NOT MORE THAN ONE
FULL TURN) NO BACK-UP ALLOWED




FRONT OF ENGINE

1/4 INCH DUNNAGE CAP
(PART OF FITTING ASSY 9A474)

INTAKE AIR
TEMPERATURE (IAT) SENSOR
12A697 TIGHTEN TO
20 N·m (15 LB-FT)

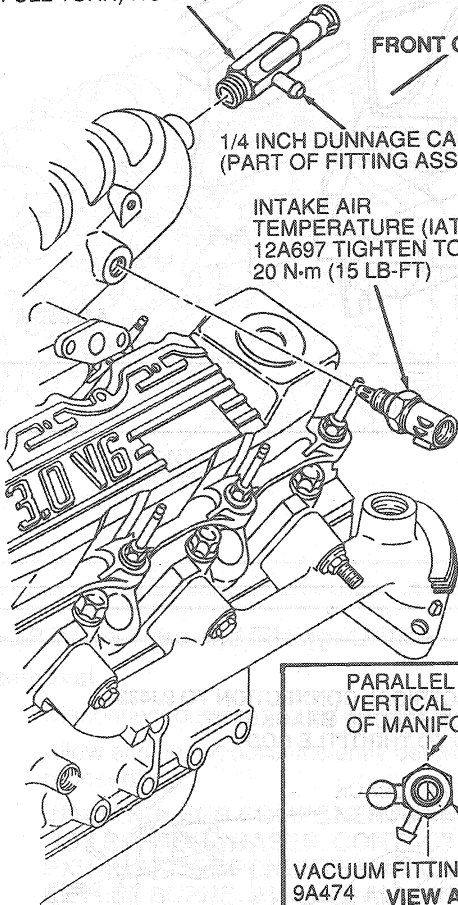

PARALLEL TO
VERTICAL C
OF MANIFOLD BOSS

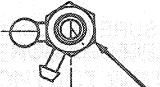


VACUUM FITTING ASSY
9A474 VIEW A

A8805-E

FF Only

Located in the air cleaner assembly. When installing, use care not to damage plastic threads.

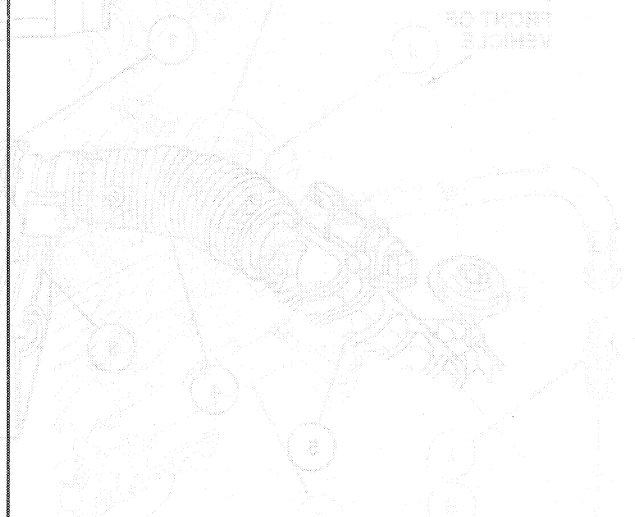

Item	Part Number	Description
1	12A697	Intake Air Temperature Sensor
2	12A697	Intake Air Temperature Sensor
3	12A697	Intake Air Temperature Sensor
4	12A697	Intake Air Temperature Sensor
5	12A697	Intake Air Temperature Sensor
6	12A697	Intake Air Temperature Sensor

1. Located in the throttle body. When installing, tighten to 20 N·m (15 lb-ft).

2. Located in the throttle body. When installing, tighten to 20 N·m (15 lb-ft).

3. Located in the throttle body. When installing, tighten to 20 N·m (15 lb-ft).

4. Located in the throttle body. When installing, tighten to 20 N·m (15 lb-ft).

5. Located in the throttle body. When installing, tighten to 20 N·m (15 lb-ft).

6. Located in the throttle body. When installing, tighten to 20 N·m (15 lb-ft).