


REMOVAL AND INSTALLATION (Continued)

REMOVAL AND INSTALLATION (Continued)

- △ SERVICE:
 - 1. DISCONNECT BATTERY CABLES
 - 2. DRAIN RADIATOR
 - 3. DISCHARGE A/C
- REMOVE/INSTALL
 - 10. AIR CLEANER ASSEMBLY
 - 11. BATTERY AND TRAY
 - 12. INTEGRATED RELAY CONTROLLER, COOLING FAN RADIATOR AND SHROUD
 - 13. ENGINE NVH BRACKET TO SHOCK TOWER
- DISCONNECT/CONNECT:
 - 20. EVAPORATIVE EMISSION LINE
 - 21. UPPER RADIATOR HOSE
 - 22. STARTER BRACE
 - 23. LOWER RADIATOR HOSE
 - 24. EXHAUST MANIFOLD AT PIPE
 - 25. POWER STEERING PUMP LINES
 - 26. FUEL LINES
 - 27. VACUUM LINES
 - 28. EXHAUST MANIFOLD AT PIPE
 - 29. GROUND STRAP
 - 30. HEATER LINES
 - 31. ACCELERATOR CABLE LINKAGE
 - THROTTLE VALVE LINKAGE
 - SPEED CONTROL CABLE
- DISCONNECT/CONNECT-WIRING:
 - 40. GENERATOR
 - 41. A/C CLUTCH
 - 42. HOZS

UNLEADED GASOLINE ONLY

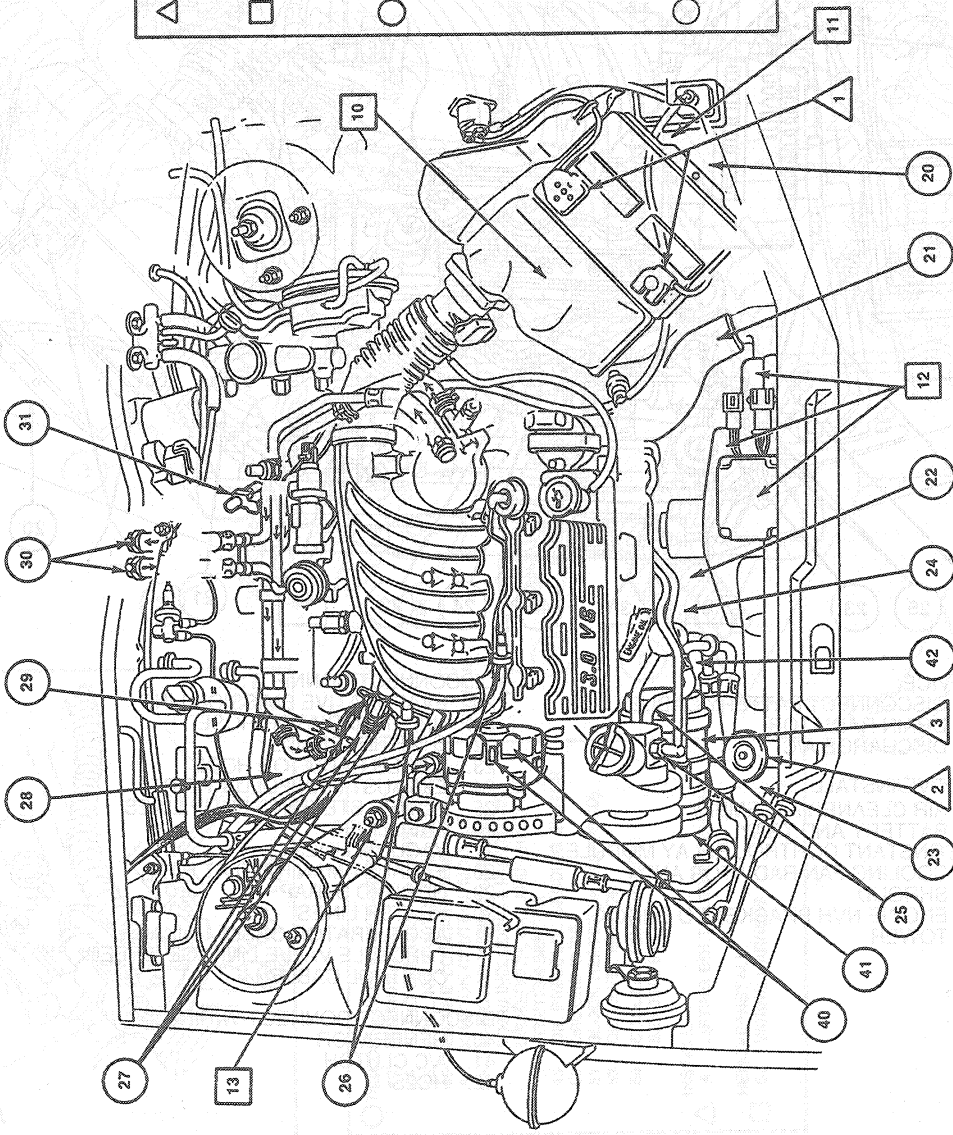

A9320-D