


REMOVAL AND INSTALLATION (Continued)

FLEXIBLE FUEL VEHICLE ONLY

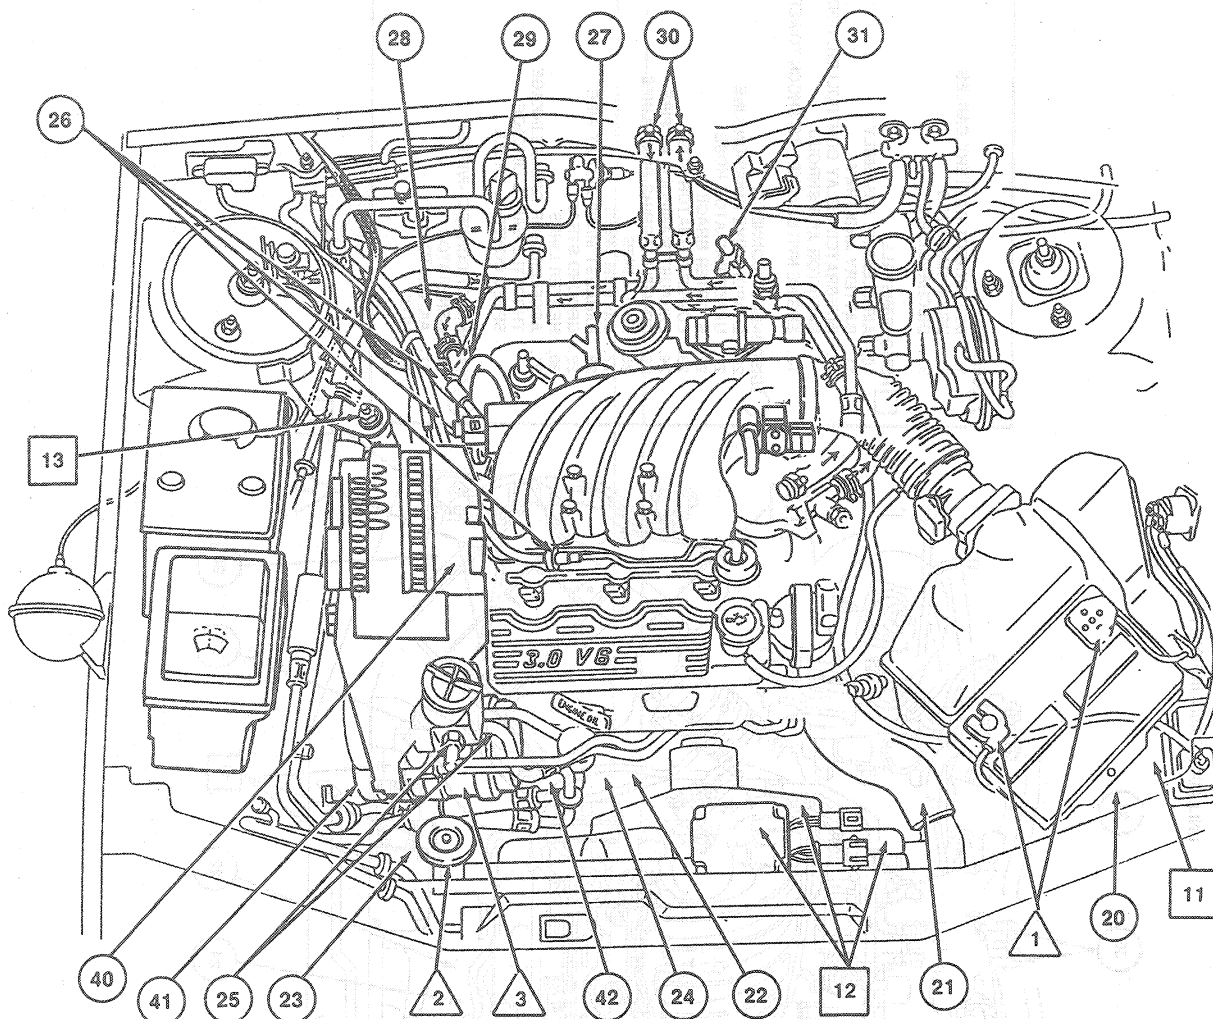

△ SERVICE:

1. DISCONNECT BATTERY CABLES
2. DRAIN RADIATOR
3. DISCHARGE A/C

□ REMOVE/INSTALL

10. AIR CLEANER ASSEMBLY
11. BATTERY AND TRAY
12. CONSTANT CONTROL RELAY MODULE, COOLING FAN RADIATOR AND SHROUD
13. ENGINE NVH BRACKET TO SHOCK TOWER

○ DISCONNECT/CONNECT:

20. EVAPORATIVE EMISSION LINE
21. UPPER RADIATOR HOSE
22. STARTER BRACE
23. LOWER RADIATOR HOSE
24. EXHAUST MANIFOLD AT PIPE
25. POWER STEERING PUMP LINES
26. FUEL LINES
27. VACUUM LINES
28. EXHAUST MANIFOLD AT PIPE
29. GROUND STRAP
30. HEATER LINES
31. ACCELERATOR CABLE LINKAGE
THROTTLE VALVE LINKAGE SPEED
CONTROL CABLE

○ DISCONNECT/CONNECT-WIRING:

40. GENERATOR
41. A/C CLUTCH
42. HO2S

A16359-A