
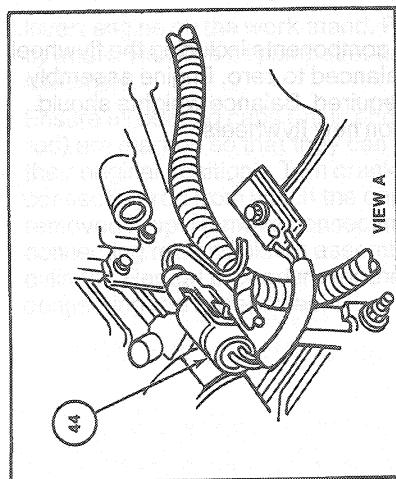


REMOVAL AND INSTALLATION (Continued)

A9321-F

UNLEADED GASOLINE ONLY

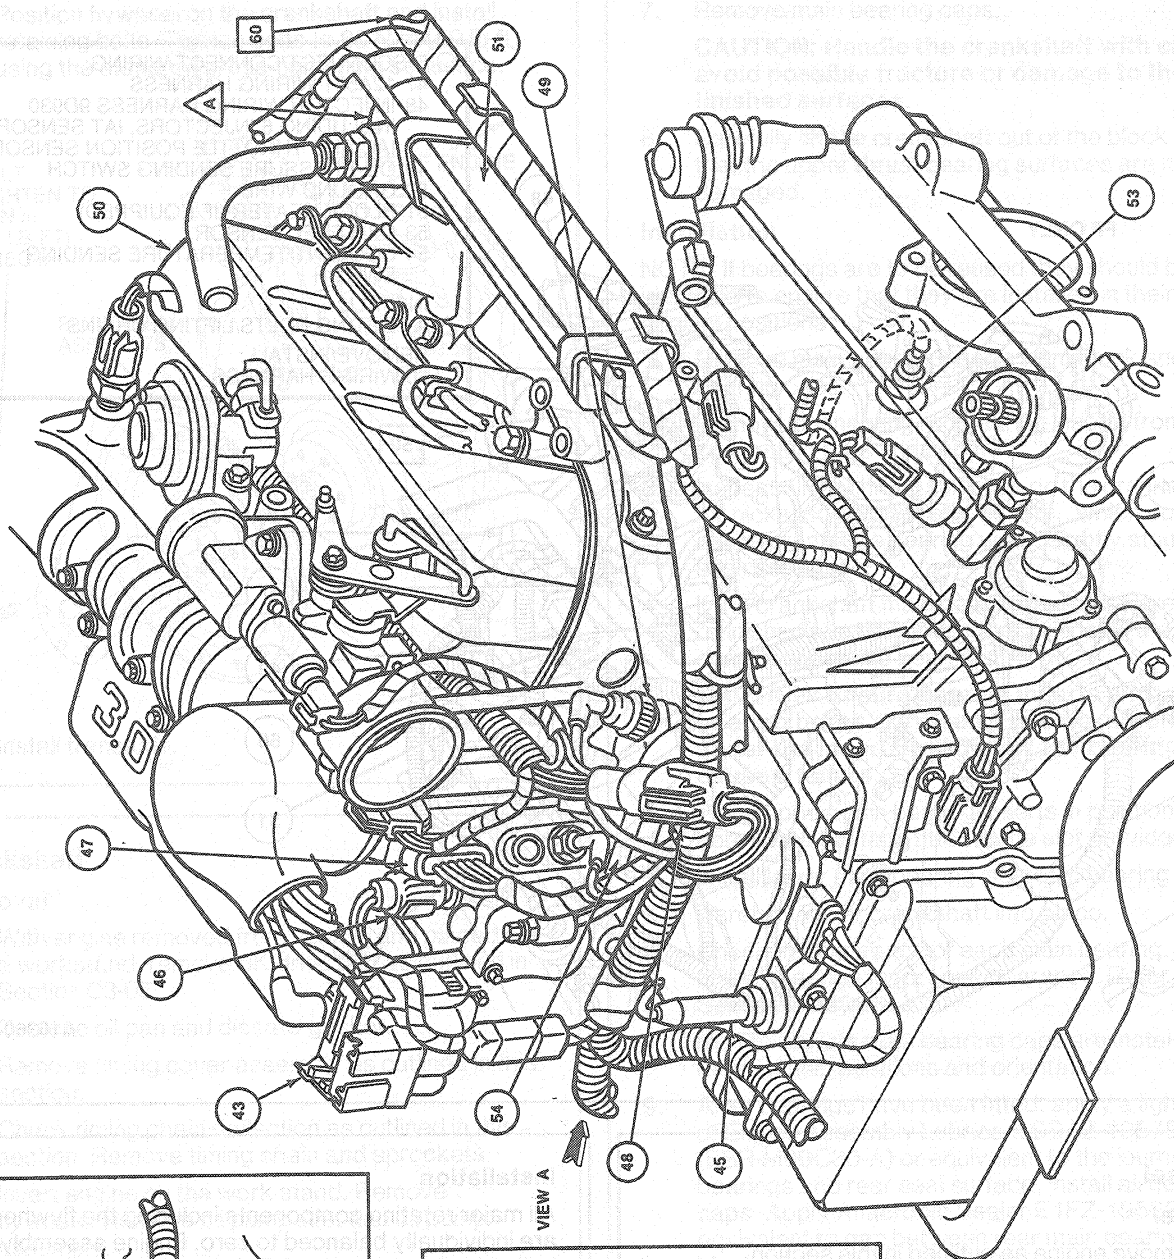

- DISCONNECT/CONNECT-WIRING:**
- 43 IGNITION COIL
 - 44 RADIO FREQUENCY SUPPRESSOR
 - 45 COOLING FAN VOLTAGE RESISTOR
 - 46 ENGINE COOLANT TEMP SENSOR
 - 47 IGNITION CONTROL MODULE
 - 48 INJECTOR WIRING HARNESS
 - 49 IAT SENSOR, IAC, AND THROTTLE POSITION SENSOR
 - 50 OIL PRESSURE SENDING SWITCH
 - 51 GROUND WIRE (IF EQUIPPED)
 - 53 BLOCK HEATER (IF EQUIPPED)
 - 54 OIL LEVEL SENSOR
 - 54 COOLANT TEMPERATURE SENDING SWITCH
- INSTALL:**
- △ A LIFTING BOLTS/LIFTING CHAINS
- REMOVE/INSTALL:**
- 60 WIRING HARNESS