
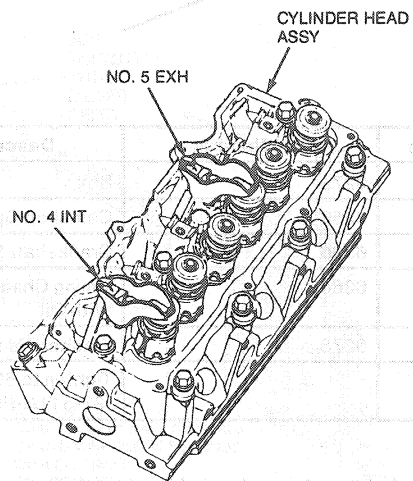
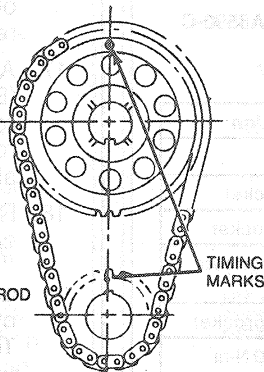
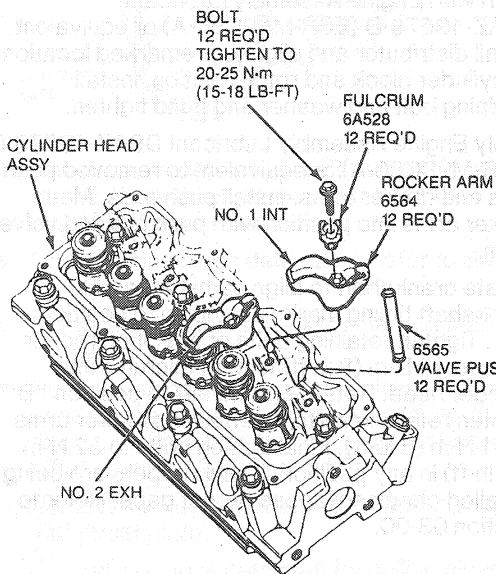
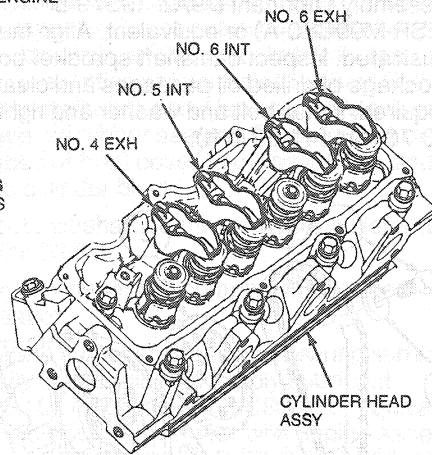
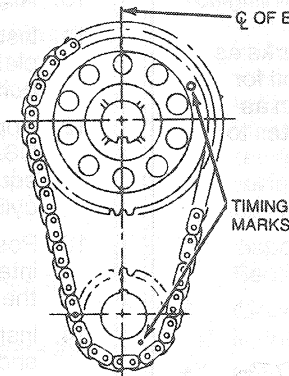


REMOVAL AND INSTALLATION (Continued)


REMOVAL AND INSTALLATION (Continued)

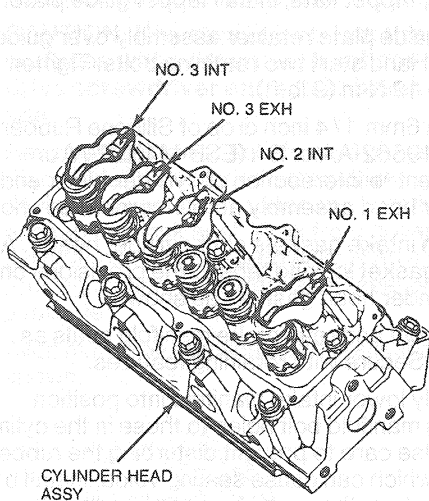

RIGHT HEAD

LEFT HEAD

FULCRUM AND BOLT MUST BE FULLY SEATED AFTER FINAL TORQUE

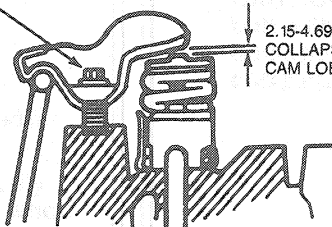

A13097-B