


IN-VEHICLE SERVICE (Continued)

23. Remove lower intake manifold retaining bolts.

**CAUTION:** The intake manifold is sealed at each corner with RTV-type sealer. To break the seal, it may be necessary to pry on the front of the manifold with a screwdriver blade. If it is necessary to pry on the intake manifold use care to prevent damage to machined surfaces.

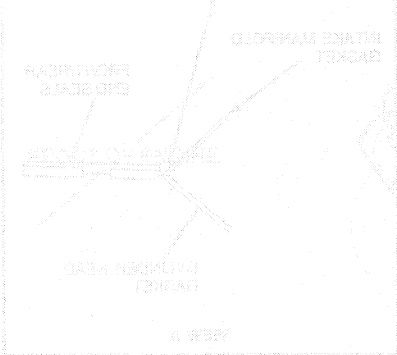

24. Remove lower intake manifold.

